


PRODUCT CODE : NEPTUN TV UNIT

We're here to help - Do not return this product !

Call, email or find us online first !

- If you need help with assembly
- If you received a damaged or defective part
- If you are missing hardware

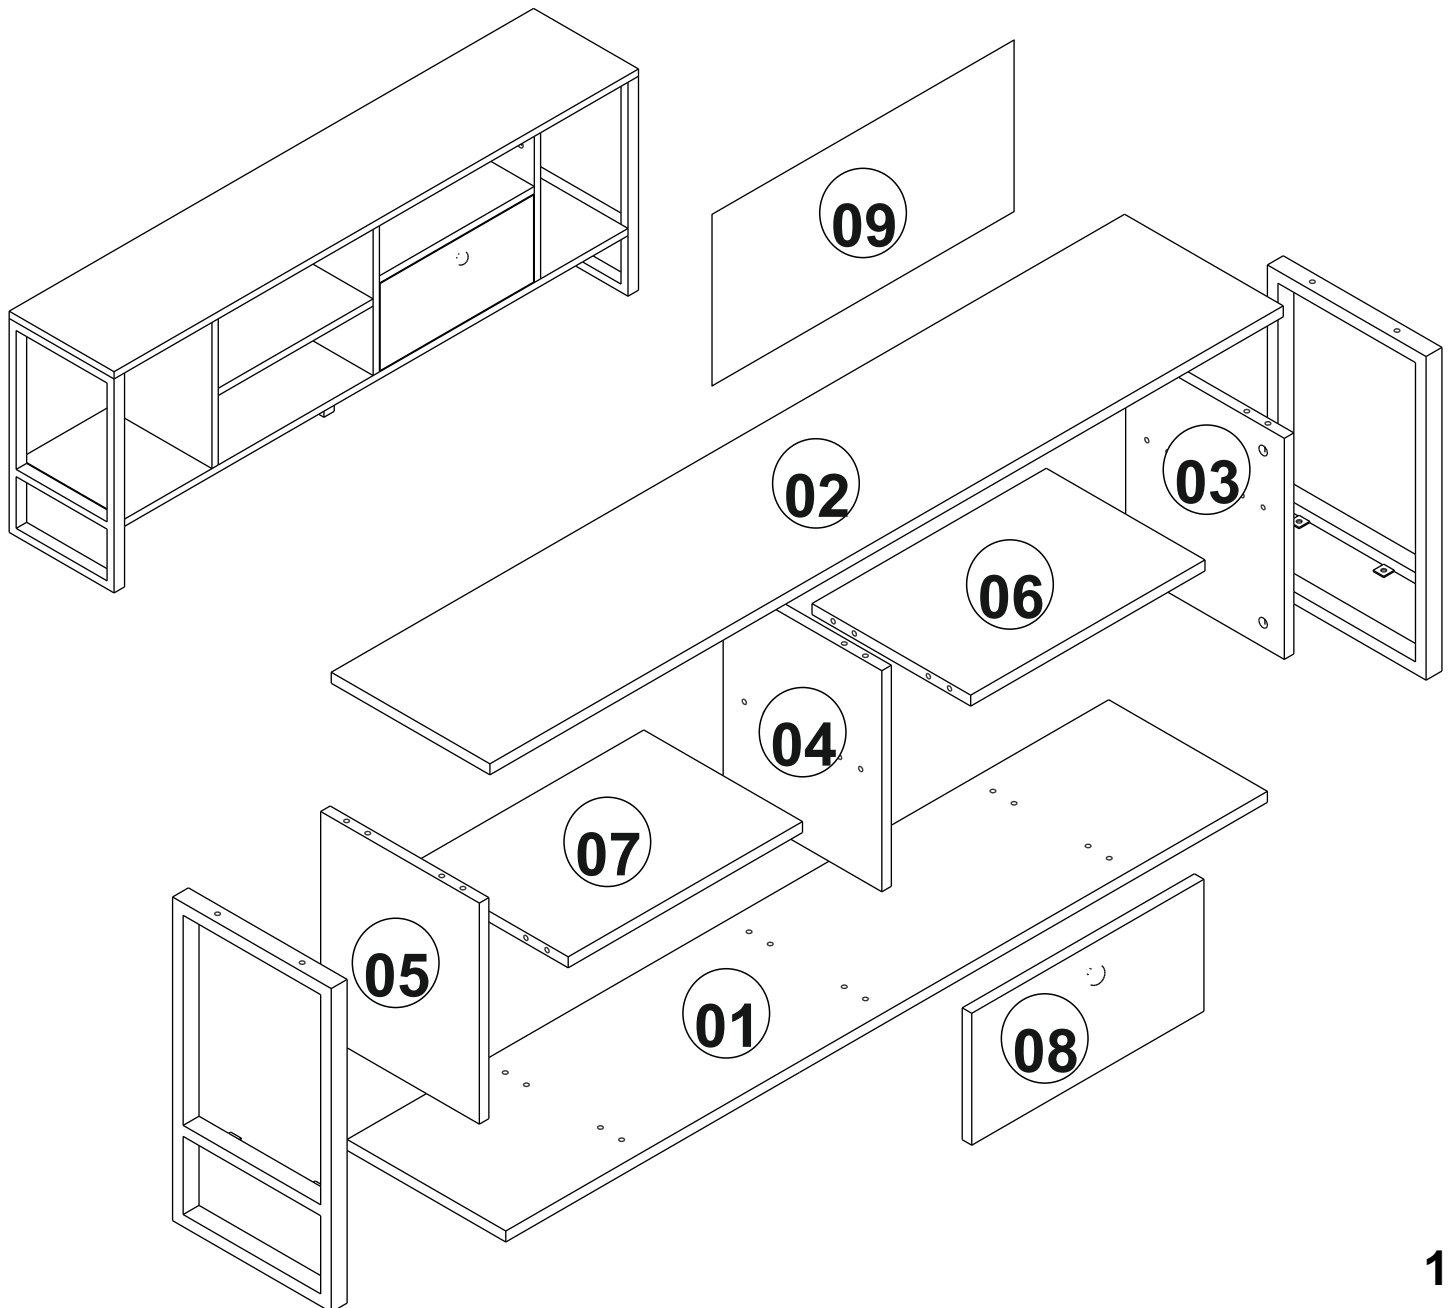

Read these assembly instructions carefully before beginning. Verify that you have in hands all the wood parts and hardware. Keep this document for future reference.



Two people are required to assemble and move this unit.



Safety First ! Do not allow children to climb on or play with furniture.



www.Jowis
Windows'us



Never leave liquids or damp clothes on your furniture. Never use chemical product to clean your furniture. Do not place your furniture in direct sunlight.











To clean your furniture, dampen a soft cloth with a mild solution of dishwashing liquid. Squeeze excess water. Clean unit and wipe it dry.

Tools required

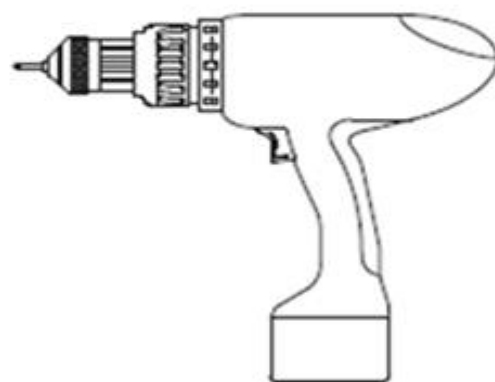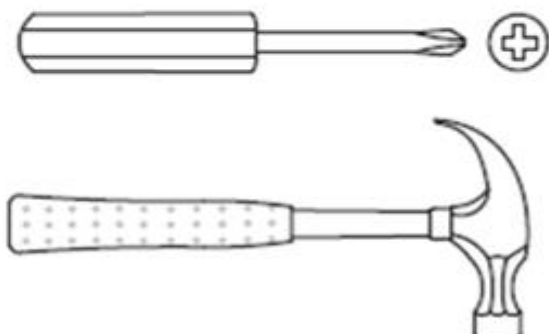

For step 9



Hardware List

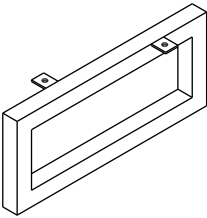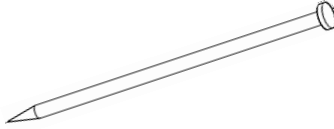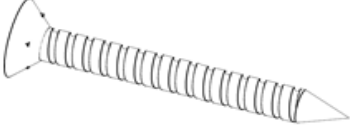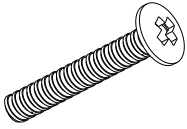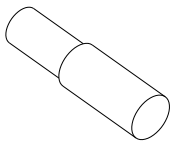20x A 	20x B 	20x C 
14x E 	2x R 	1x N 
2x G 	1x H 	10x J 
20x K 	4x L 	1x D 
1x M 		

1

install the 12 push bolts and 12 dowels into the panels 1 and 2.

Pres firmly into the hole

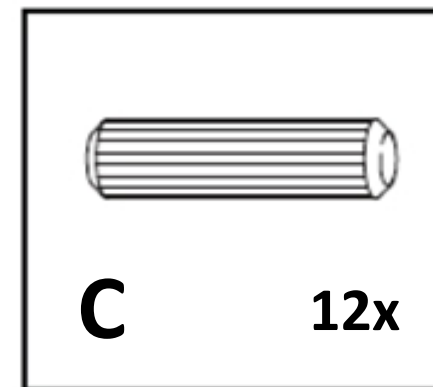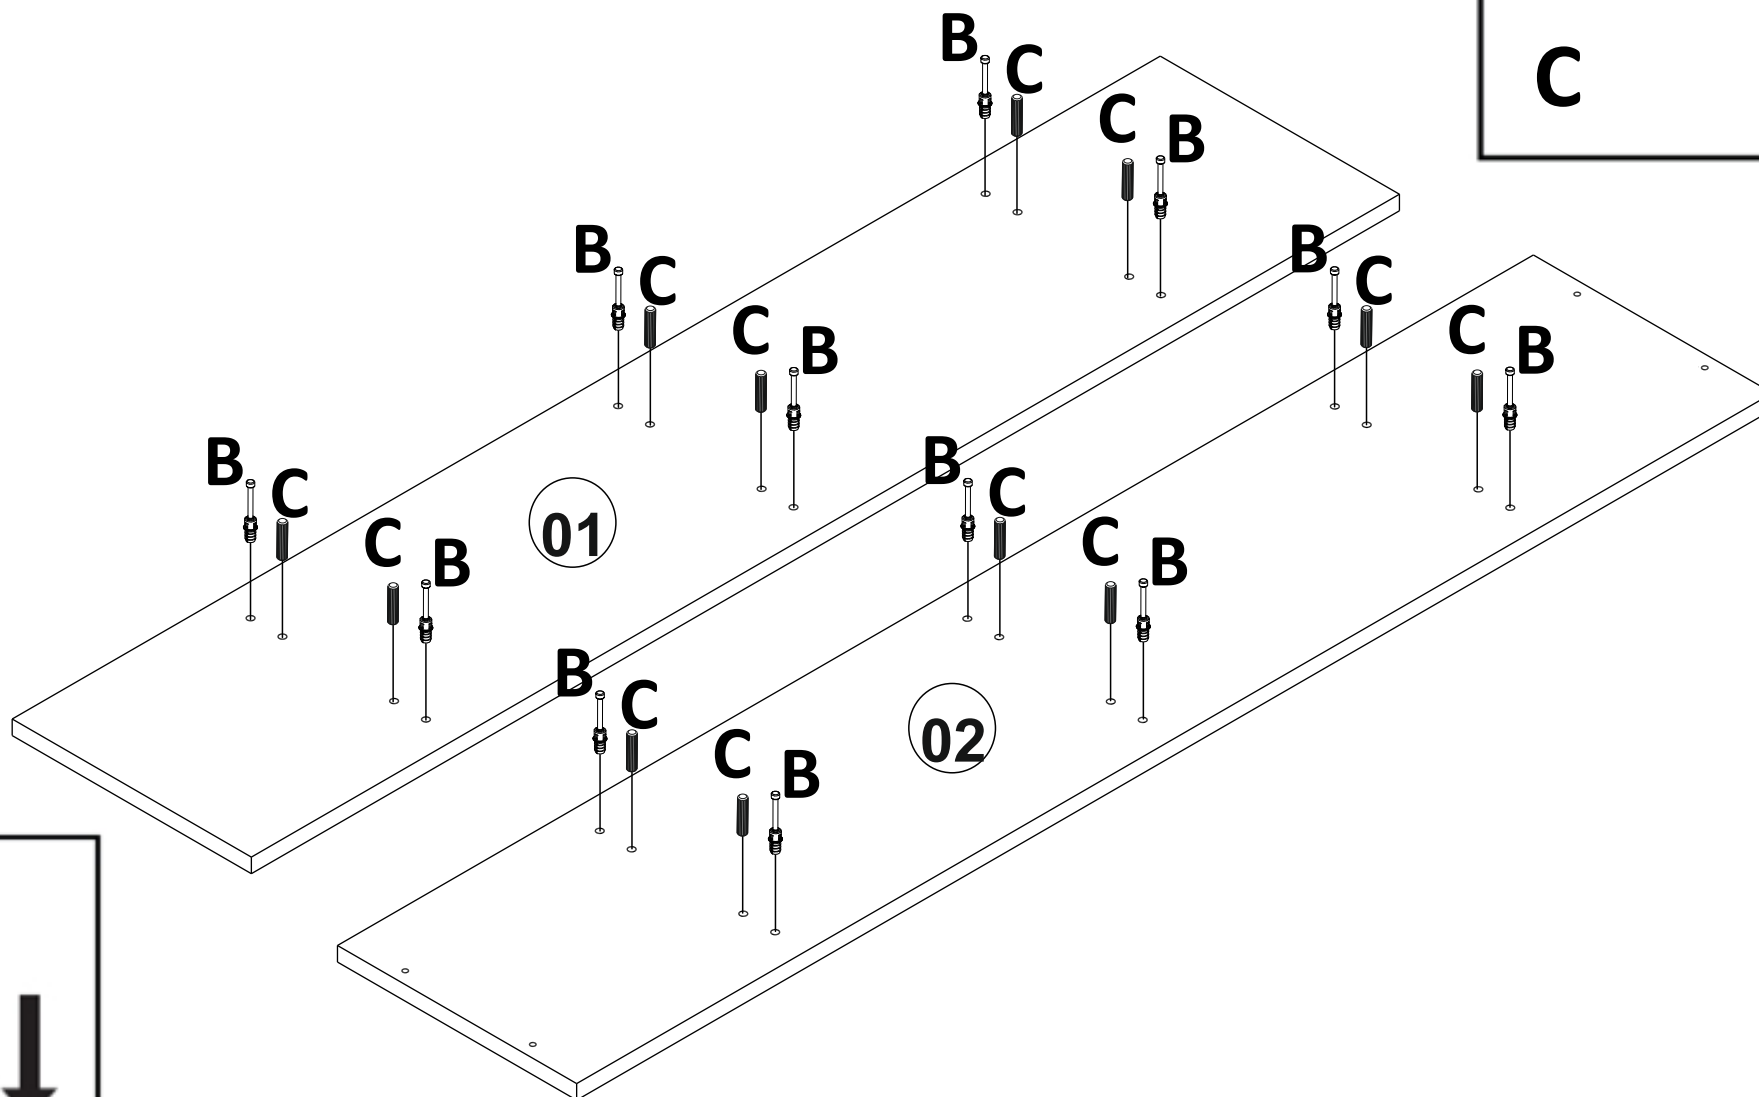

12x











12x

B






Insert the 20 cam locks, install the 8 push bolts and 8 dowels into the panels 3,4,5,6 and 7

Pres firmly into the hole

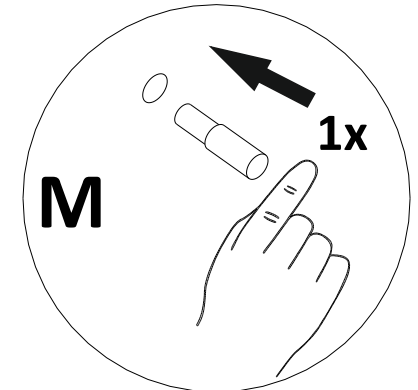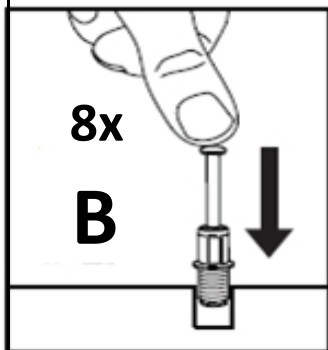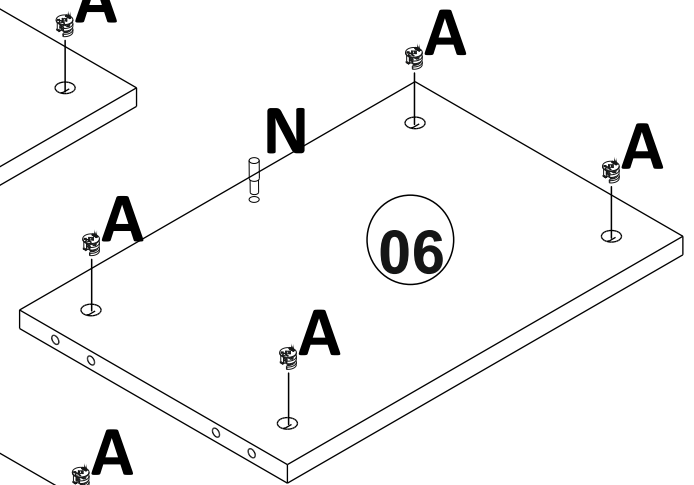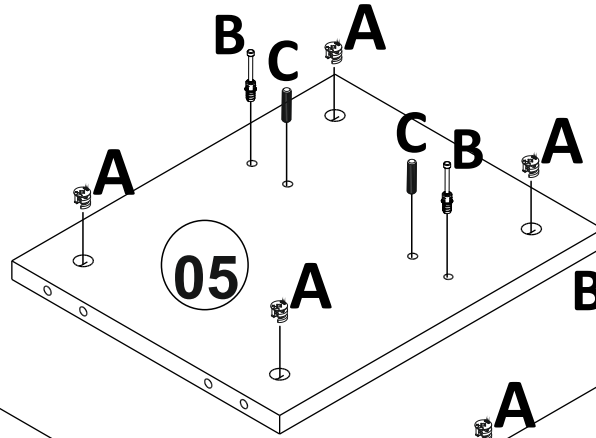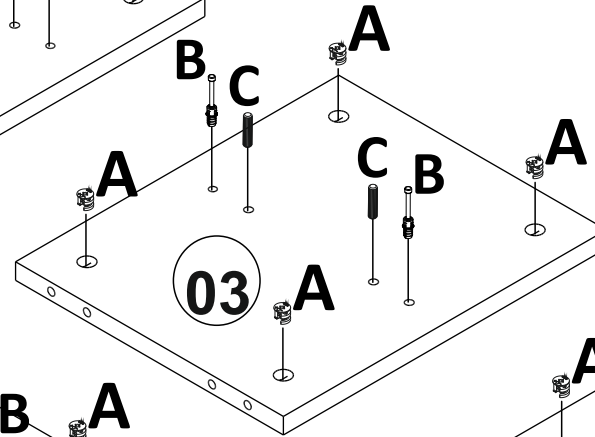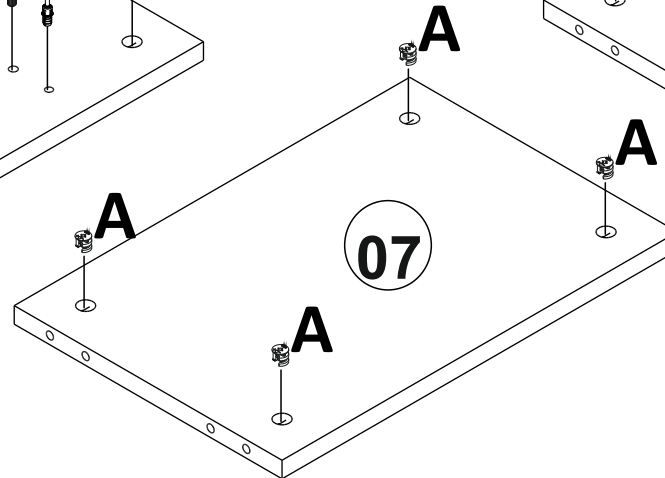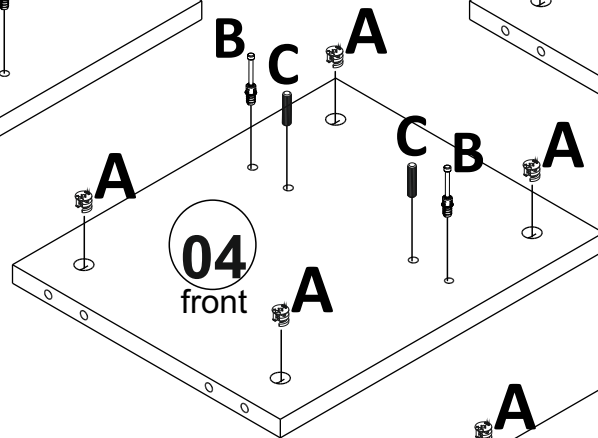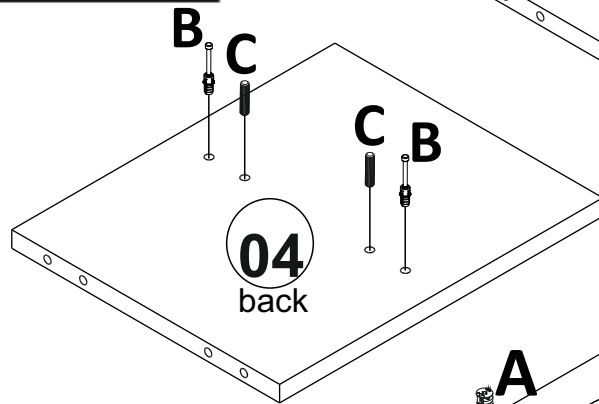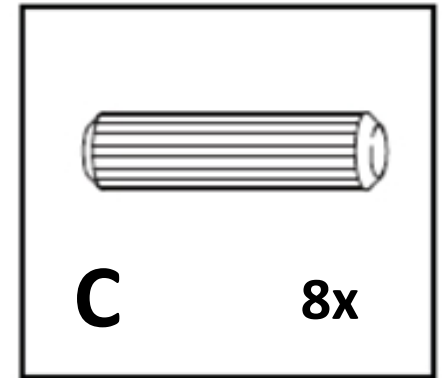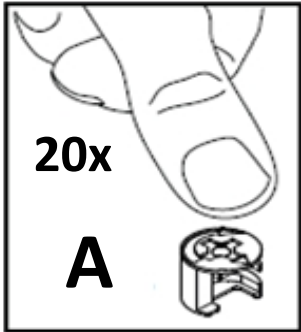

3 Fasten the panel 3,4 and 5 to the panels 6 and 7. Then tighter the 8 cam locks.

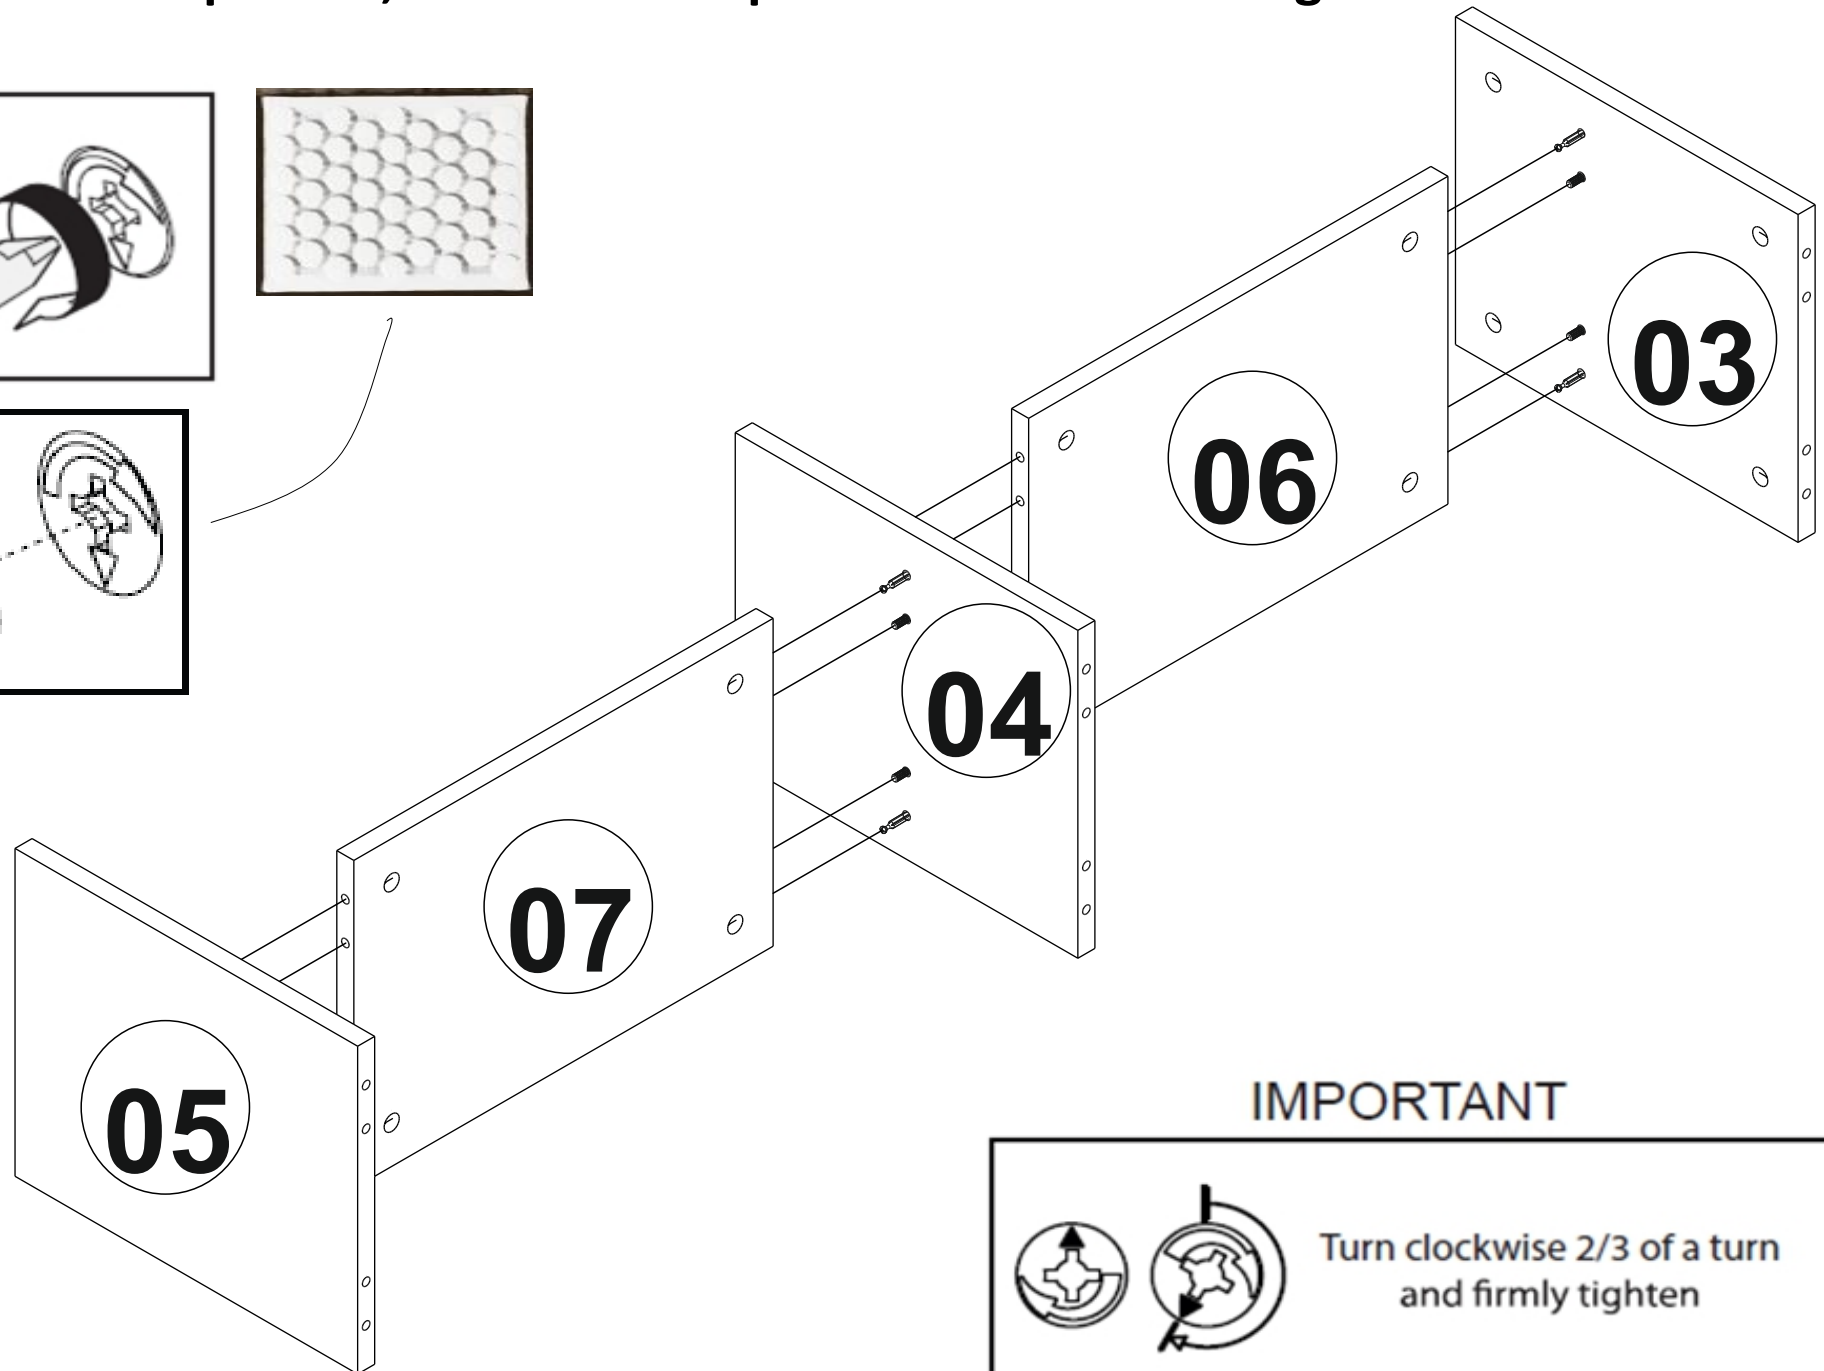
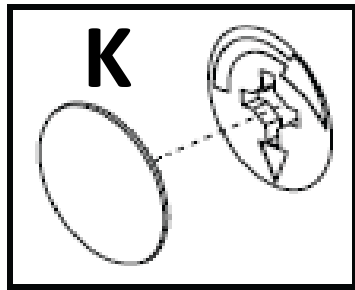
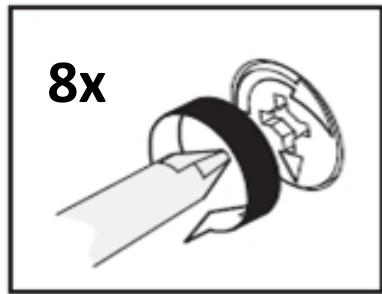


IMPORTANT




Turn clockwise 2/3 of a turn
and firmly tighten

4 Fasten the panel 1 and 2 to the panels 3,4 and 5. Then tighter the 12 cam locks.

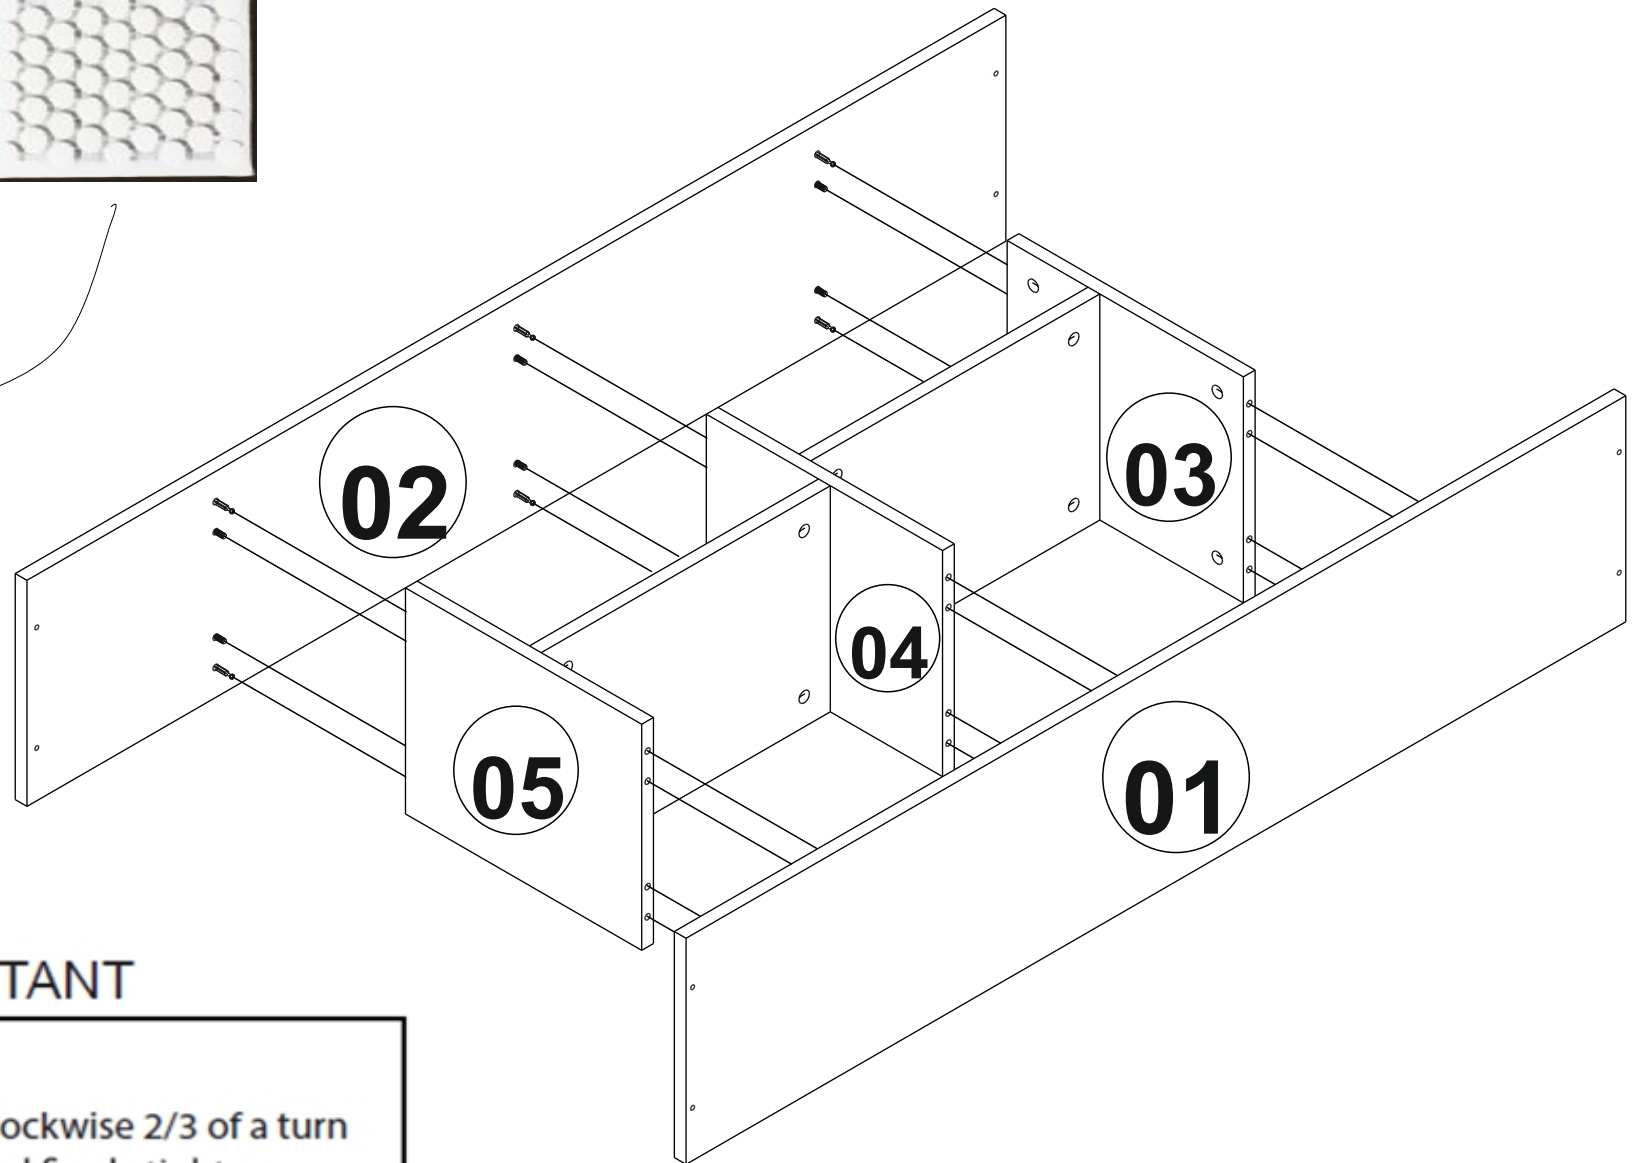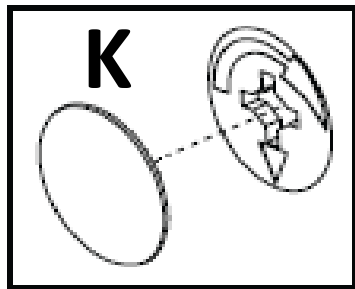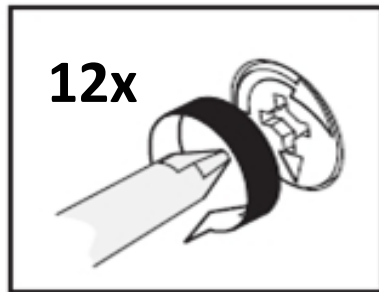


IMPORTANT

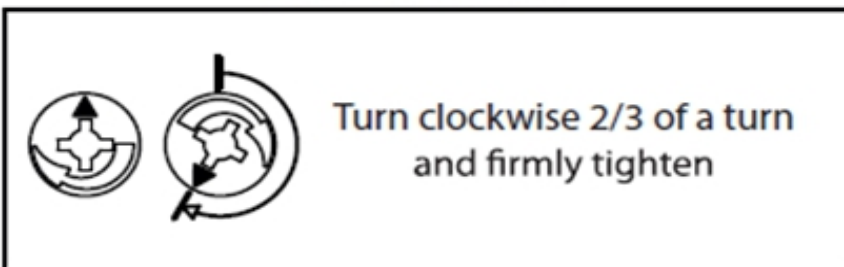


5



Use the nails to fasten the back panel to the unit.

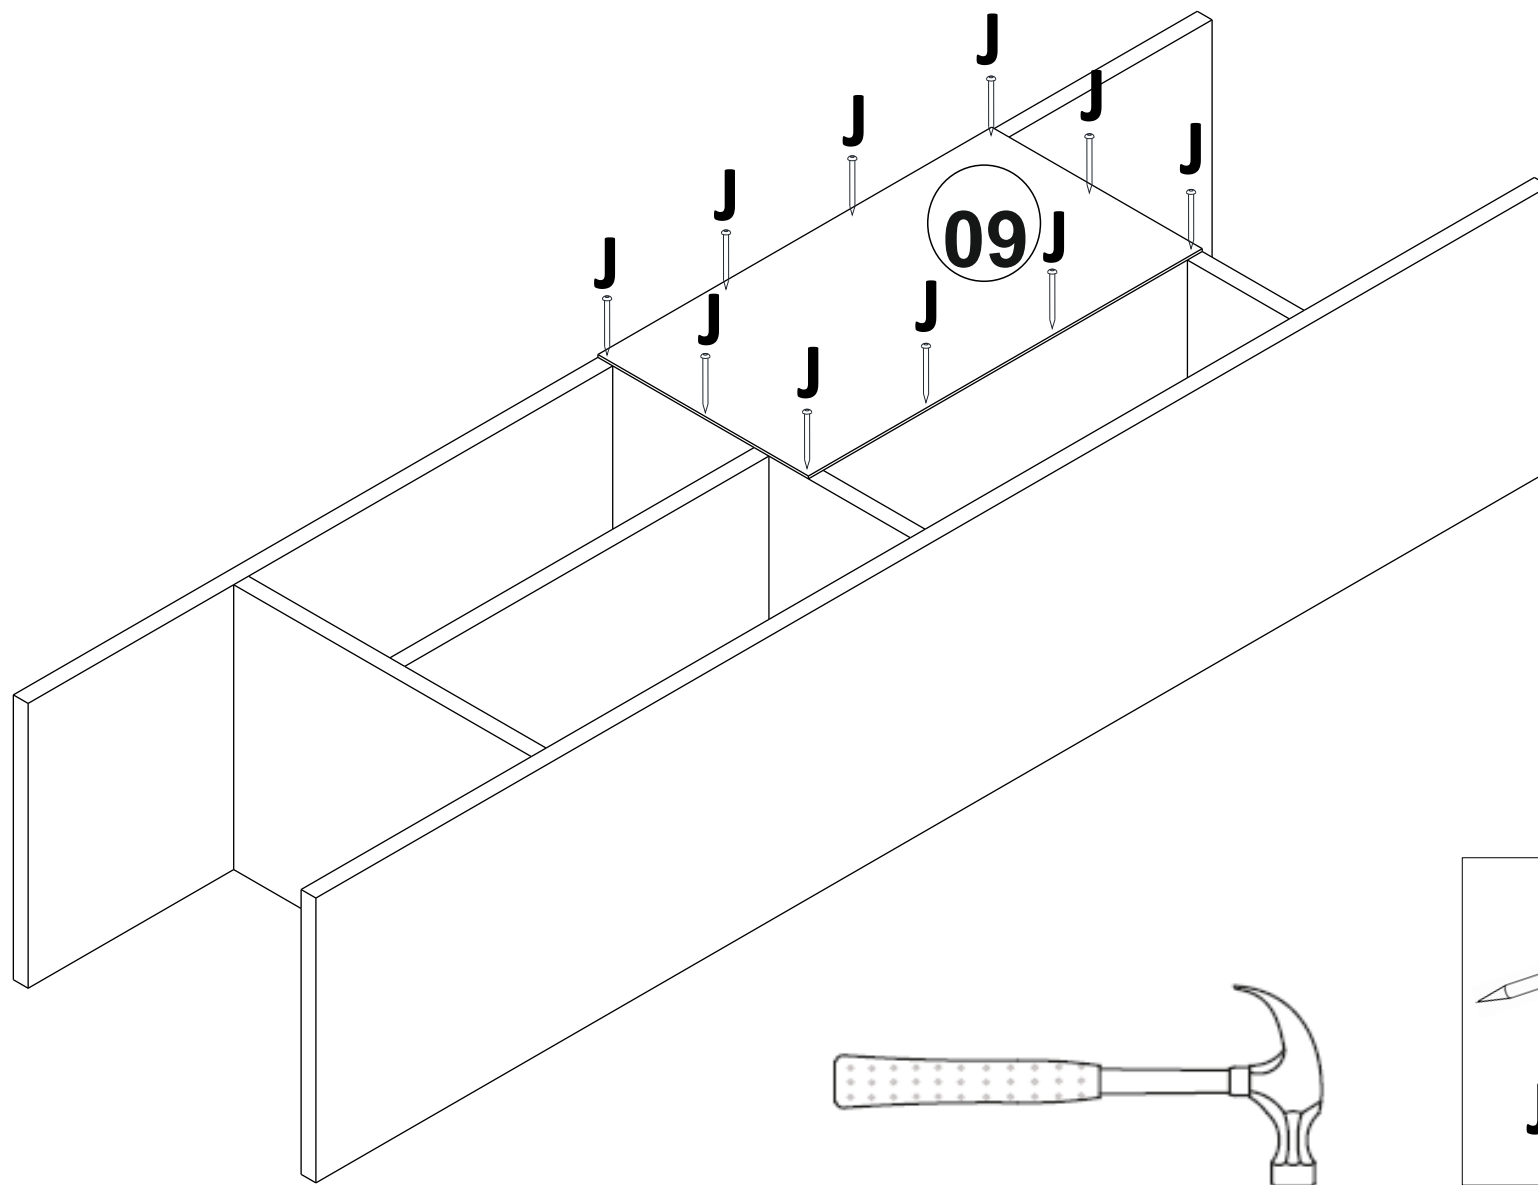





6 Fix the metal feet to panel 1 with screws.

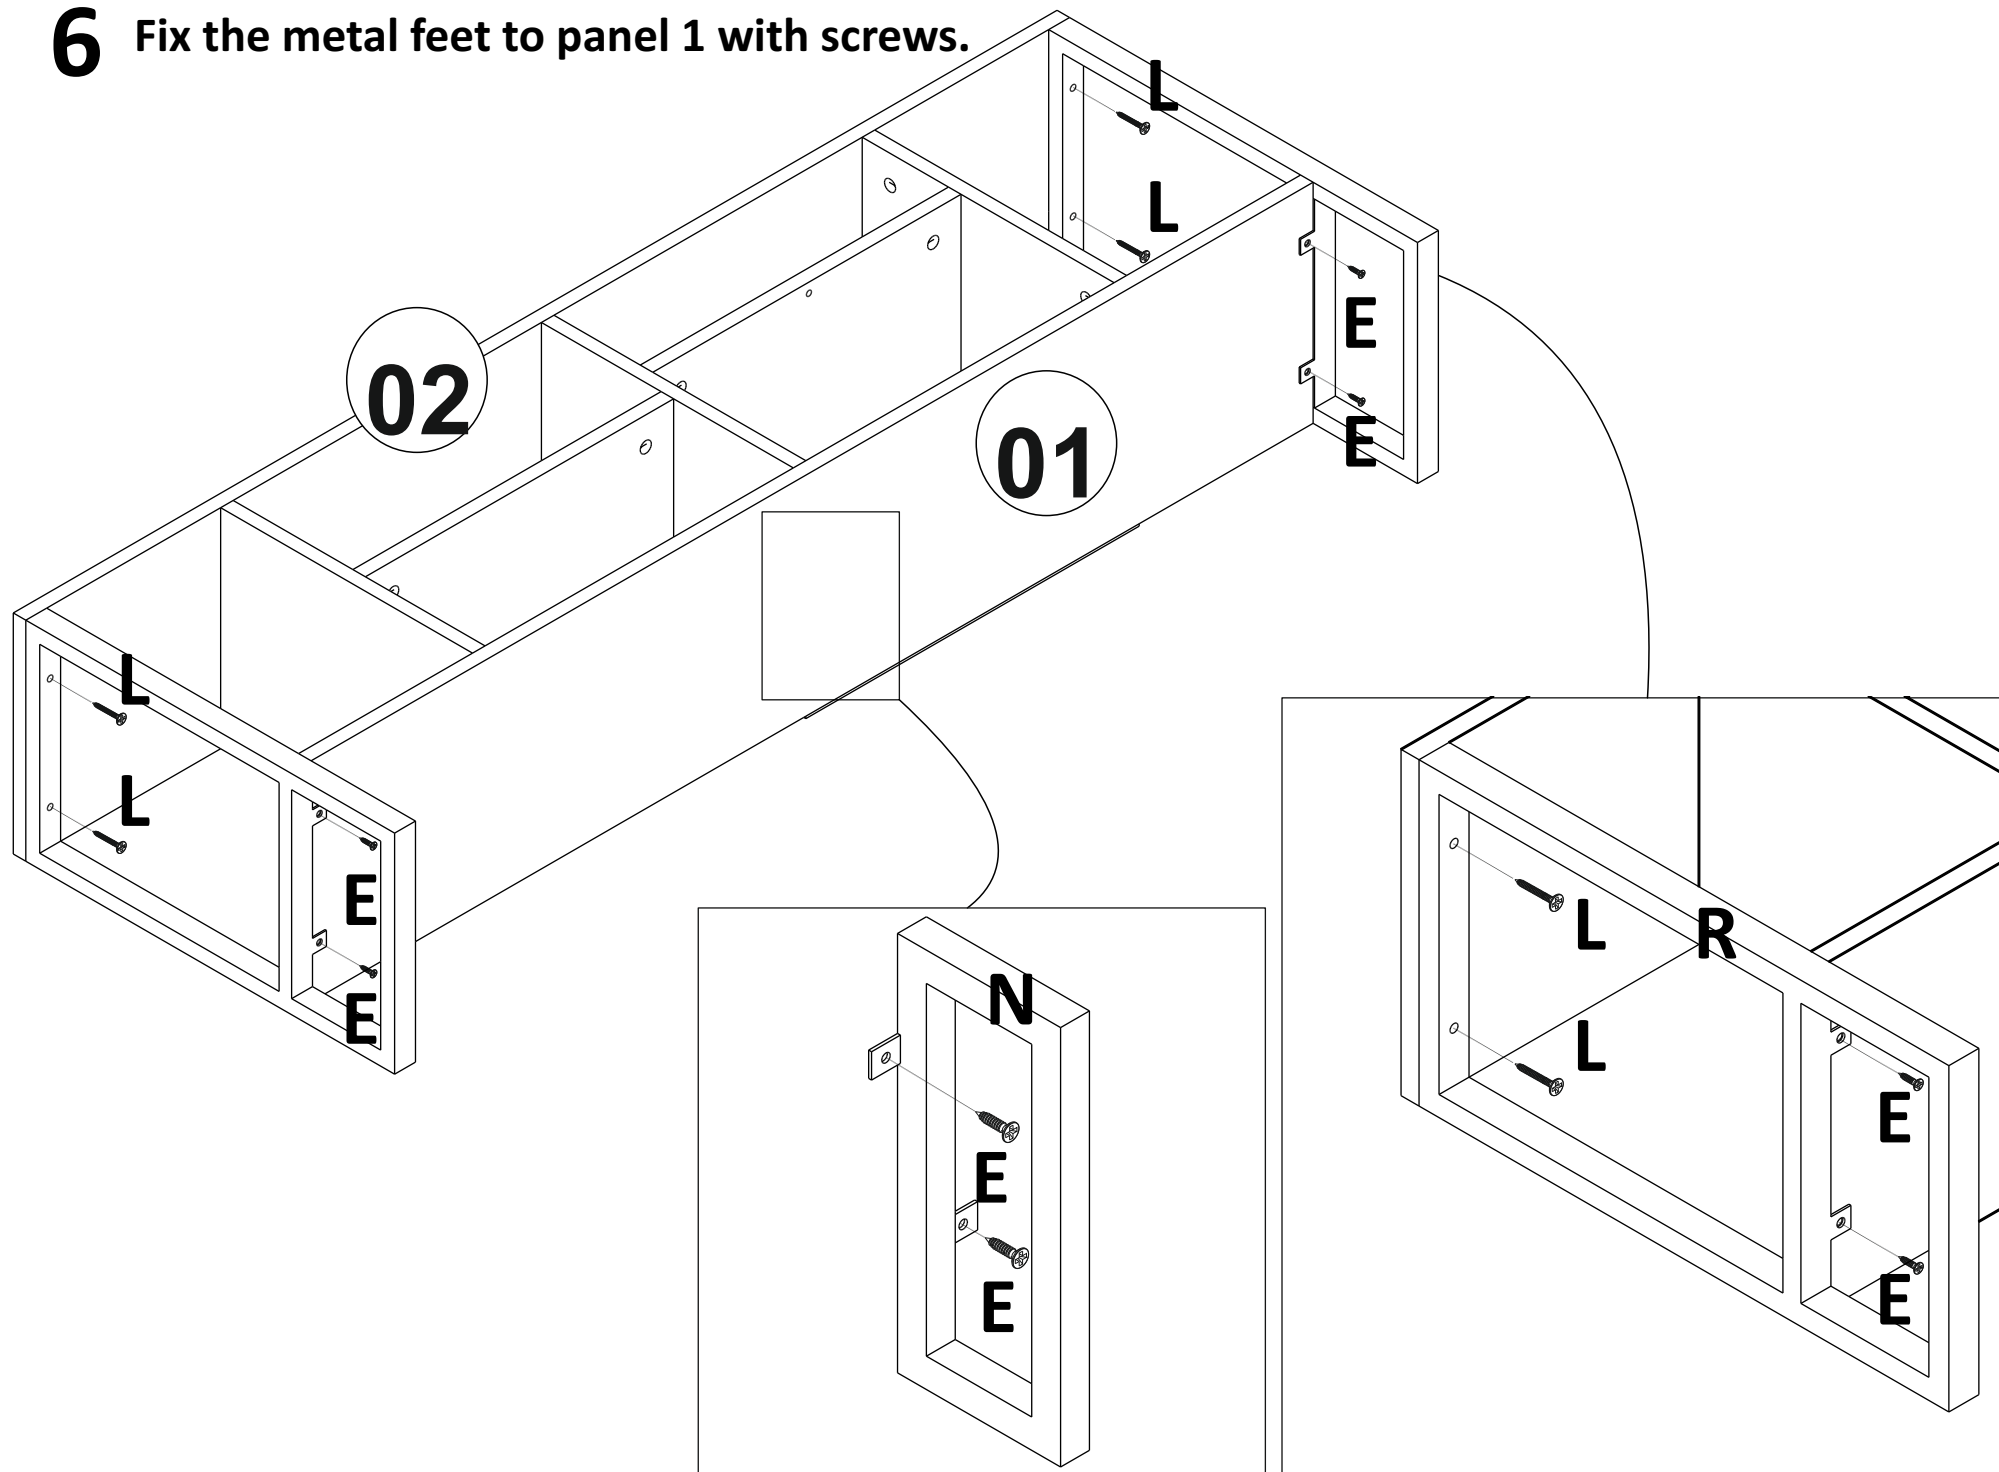

7 Fasten the 2 hinges to a pair of 1 doors 8



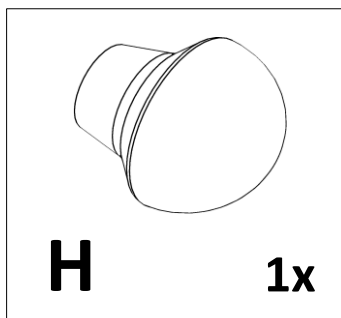
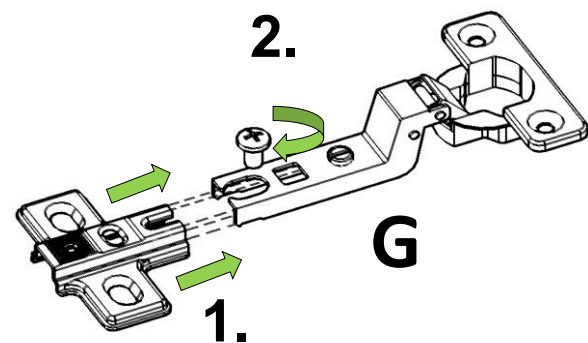


Install the 1 handles
into the 1 doors 8

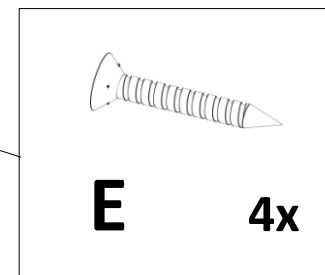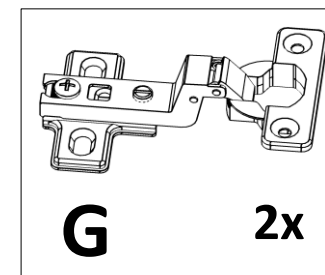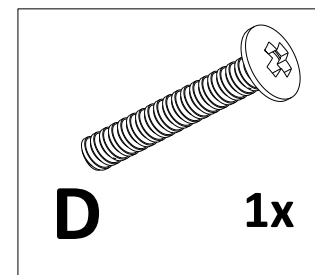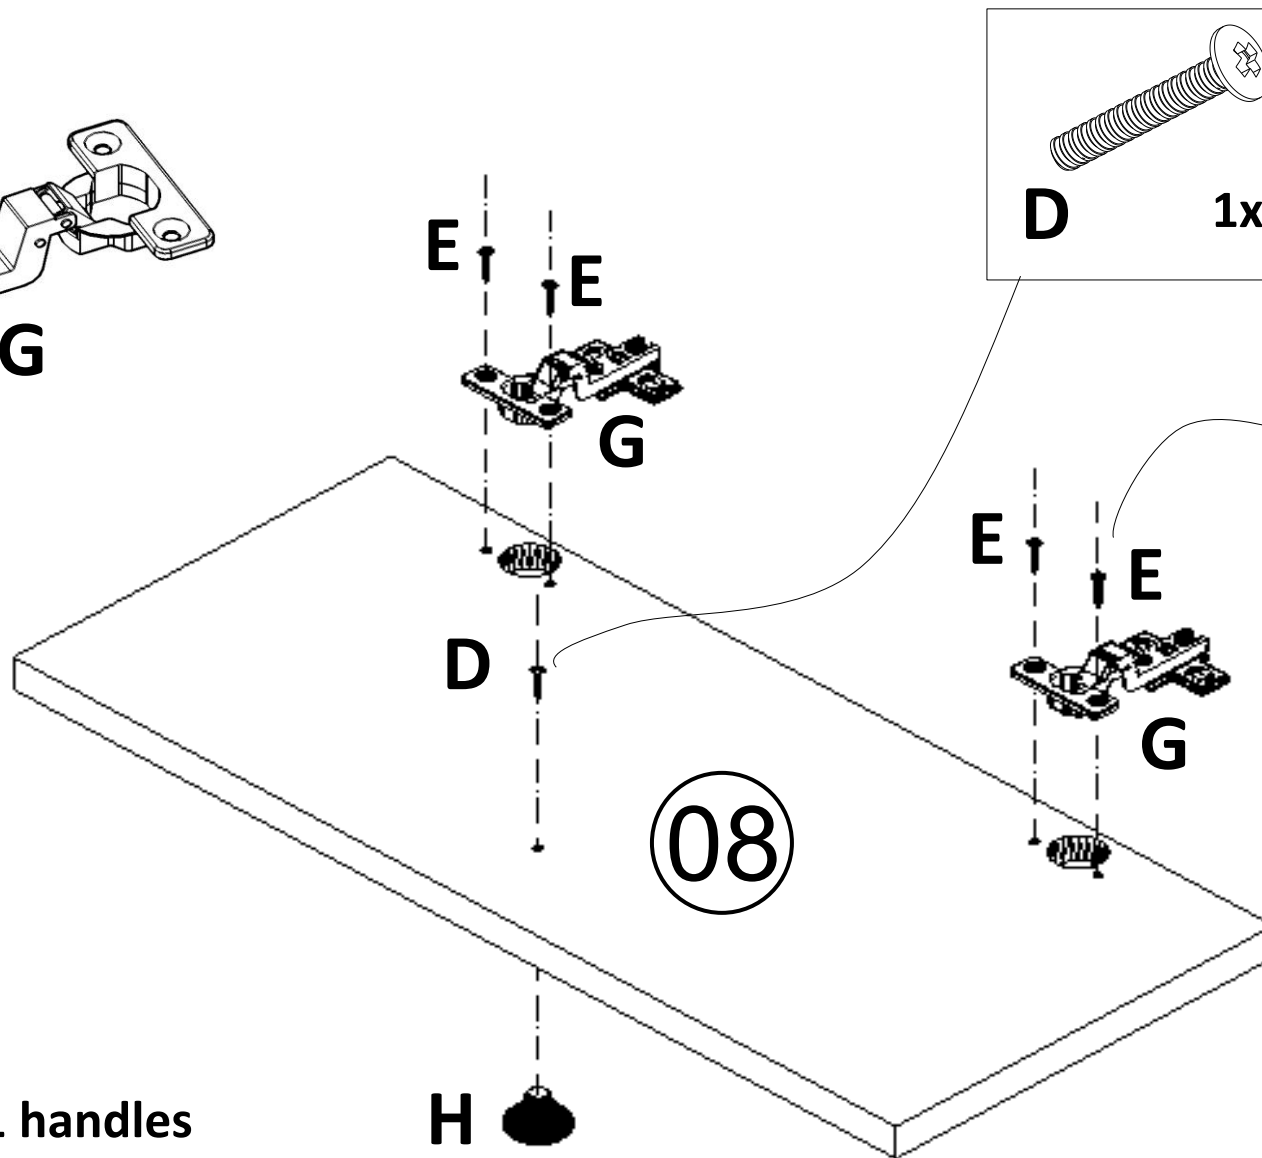

8

Fasten the doors 8, with the hinges, to the panel 1.

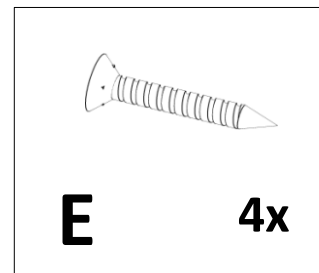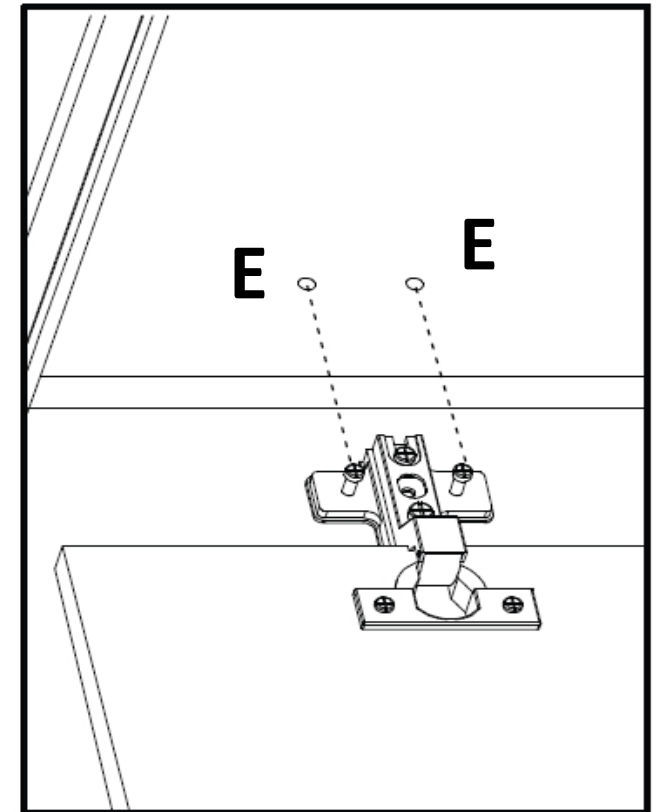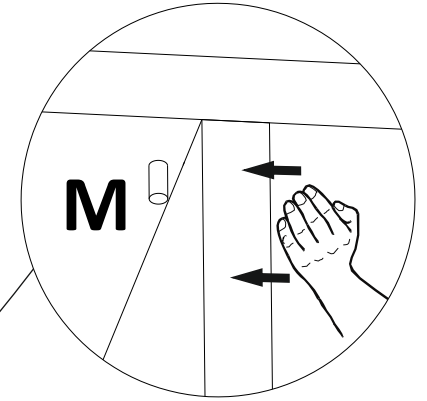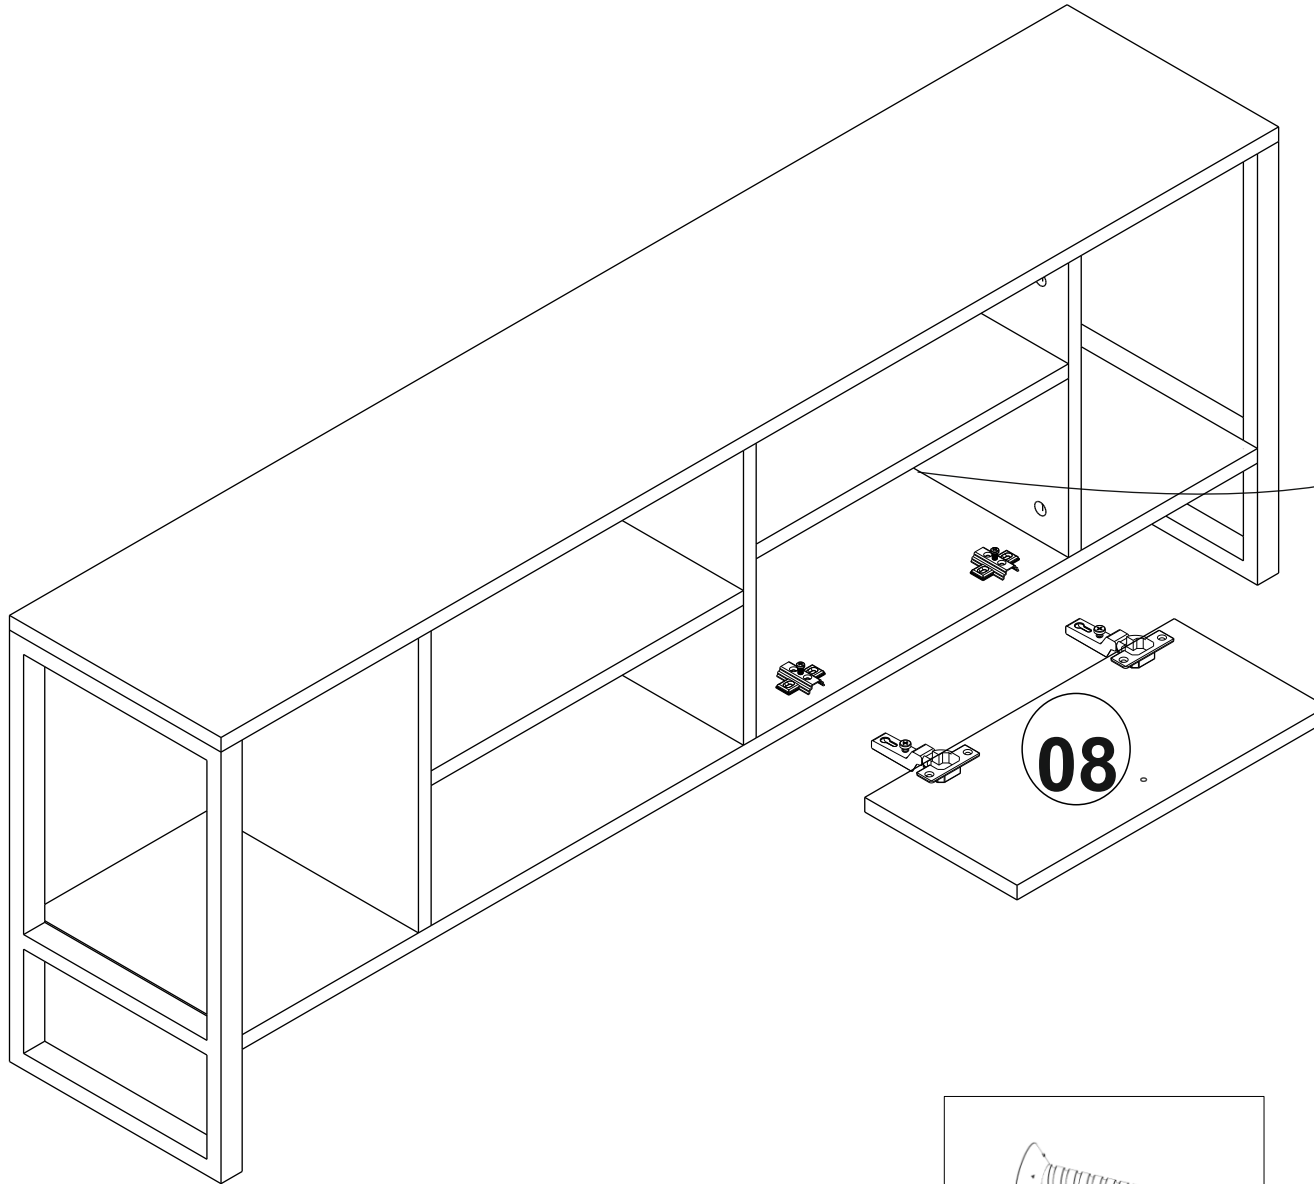

9 Adjustment of hinges.

