


PRODUCT CODE : NICE TV UNIT


We're here to help - Do not return this product !

Call, email or find us online first !

- If you need help with assembly
- If you received a damaged or defective part
- If you are missing hardware

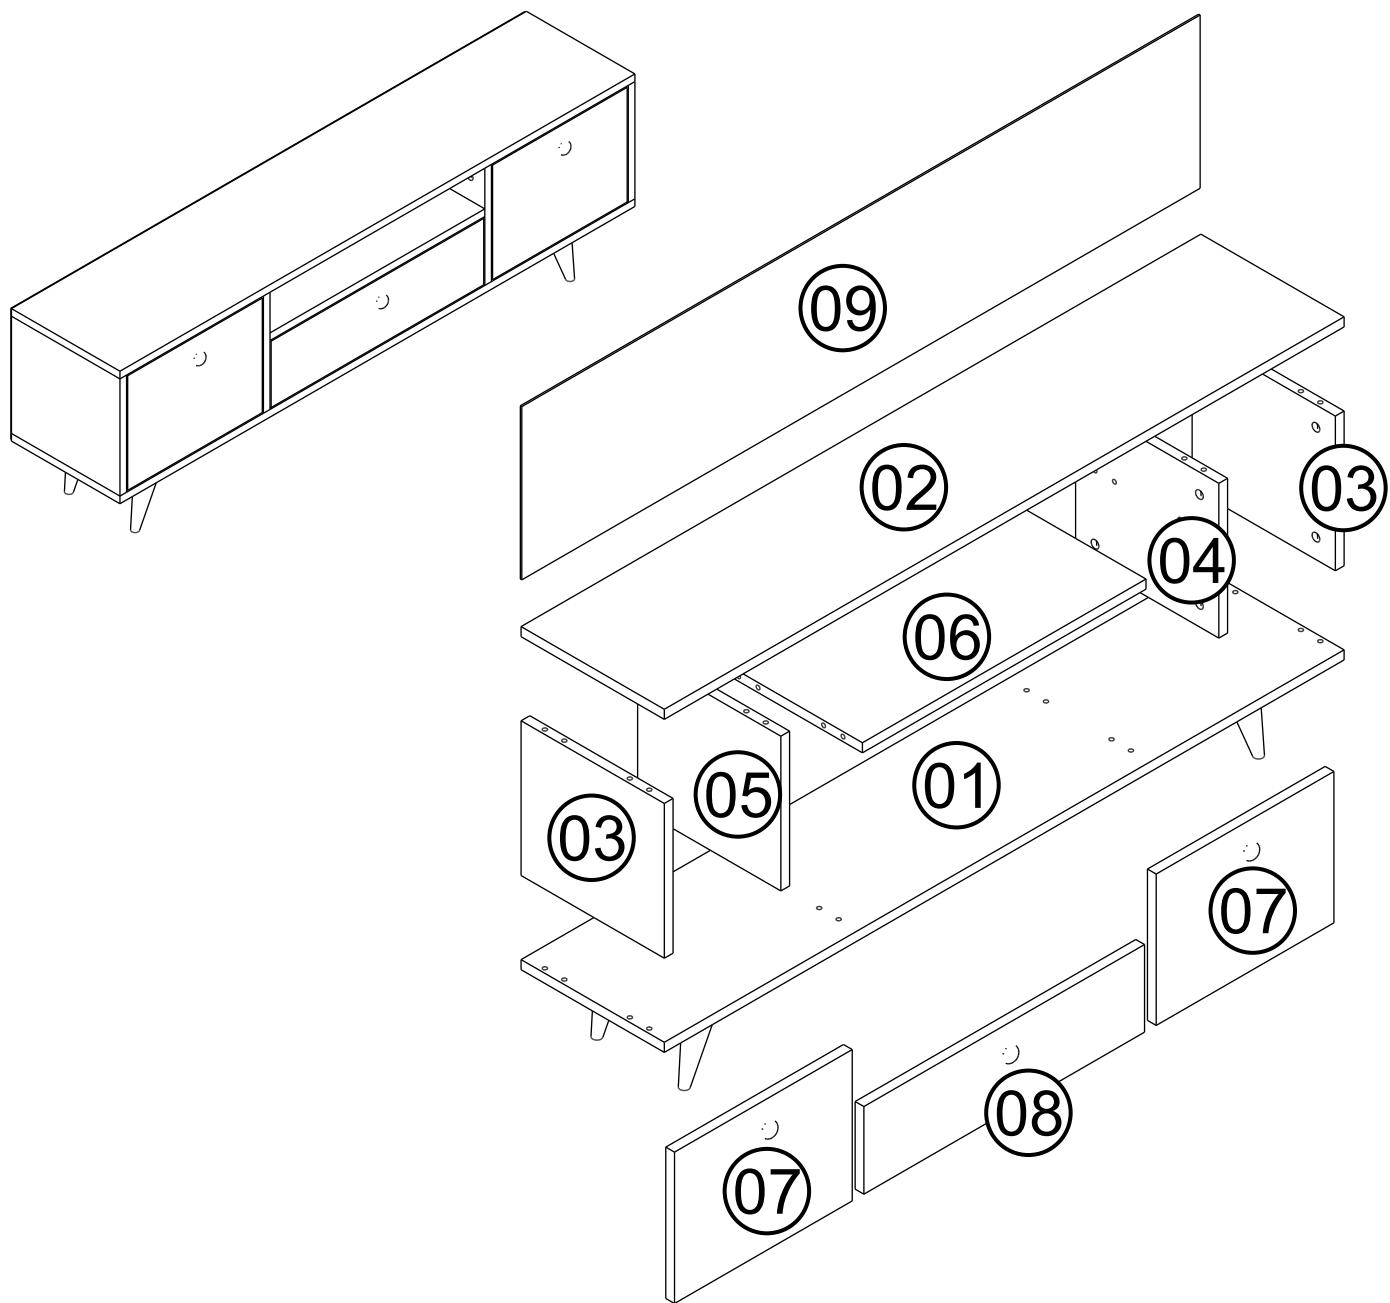

Read these assembly instructions carefully before beginning. Verify that you have in hands all the wood parts and hardware. Keep this document for future reference.

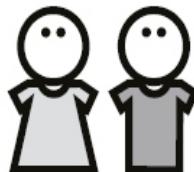

Two people are required to assemble and move this unit.



Safety First! Do not allow children to climb on or play with furniture.



Windows
Windows



Never leave liquids or damp clothes on your furniture. Never use chemical product to clean your furniture. Do not place your furniture in direct sunlight.

To clean your furniture, dampen a soft cloth with a mild solution of dishwashing liquid. Squeeze excess water. Clean unit and wipe it dry.


Tools required

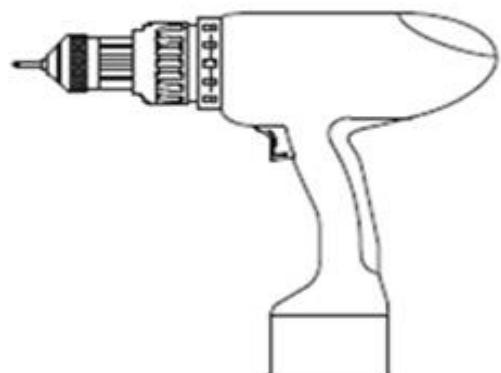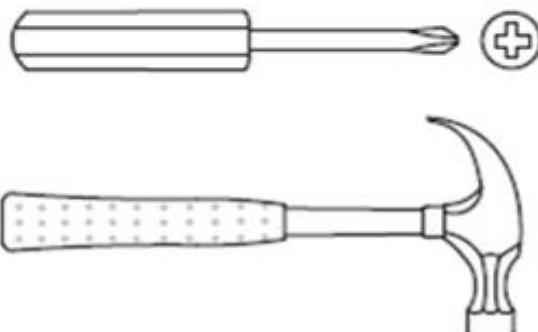


For step 10

Hardware List


20x A	20x B	20x C
	44x E	4x F
6x G	3x H	18x J
20x K	3x J	3x M

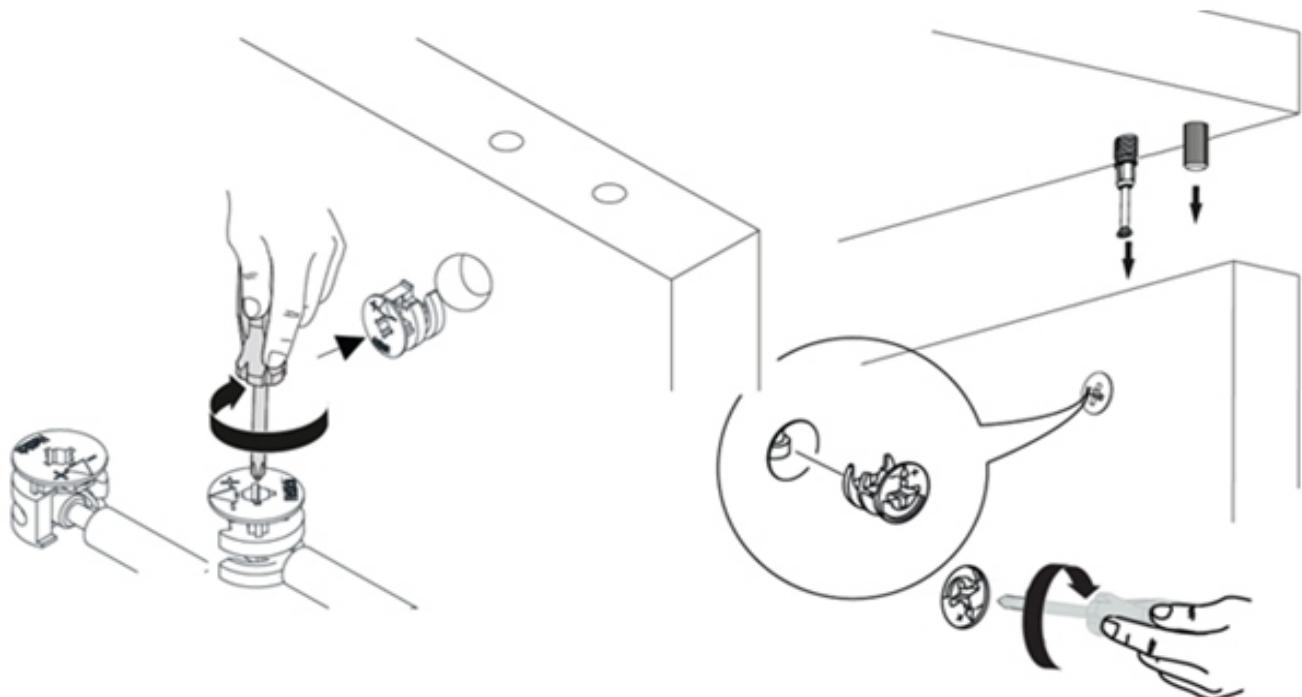




1 Fix the plastic feet to panel 1 with screws.

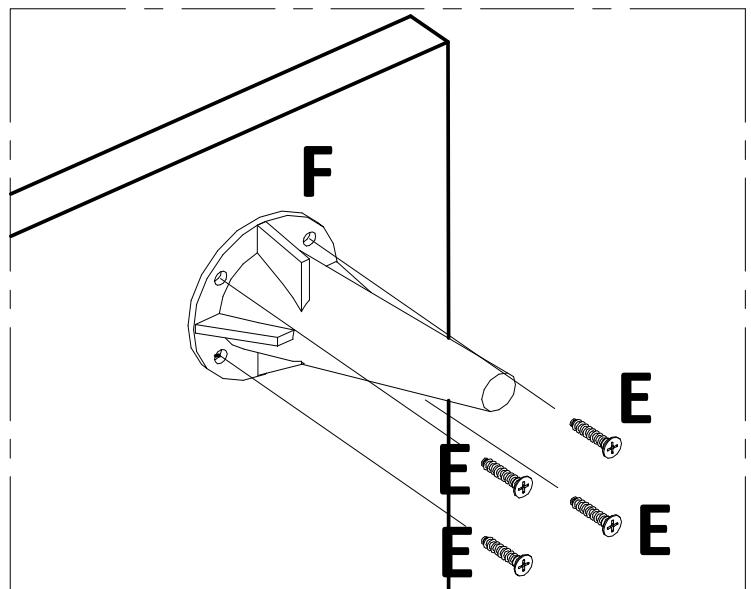

01





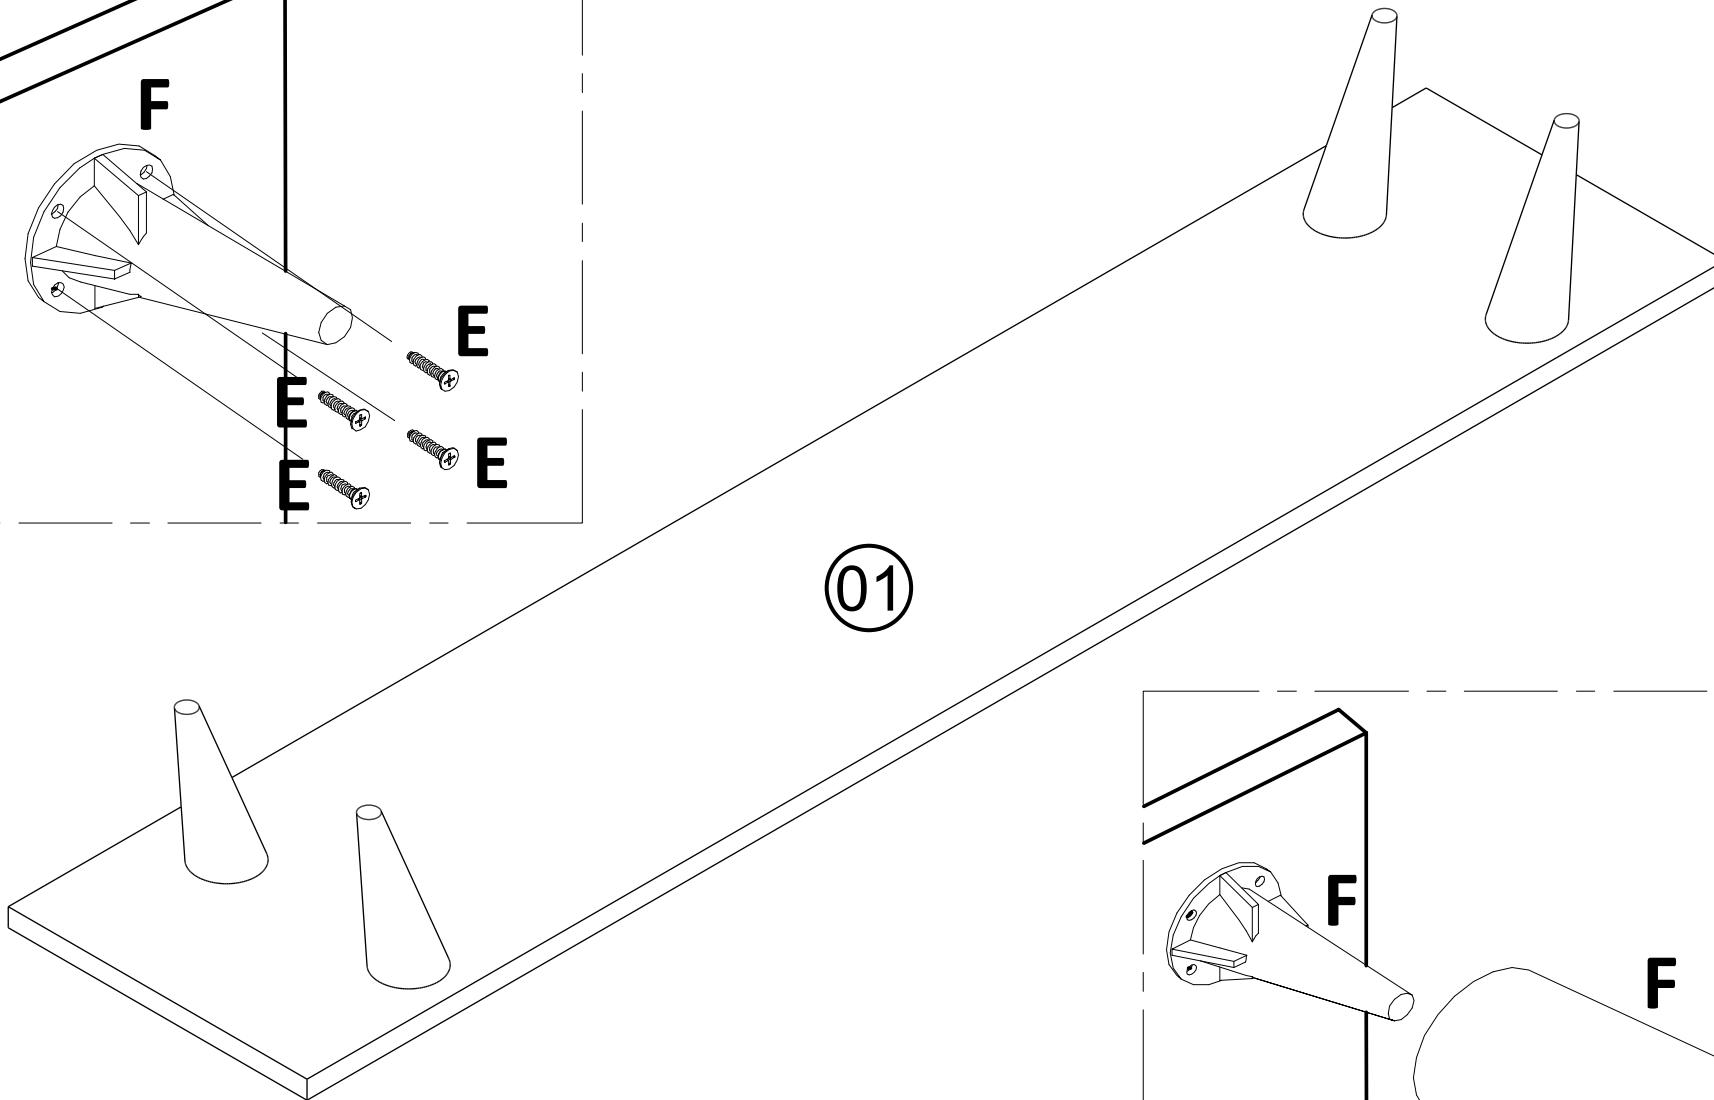


2 Install the 16 push bolts and 16 dowels into the panels 1 and 2





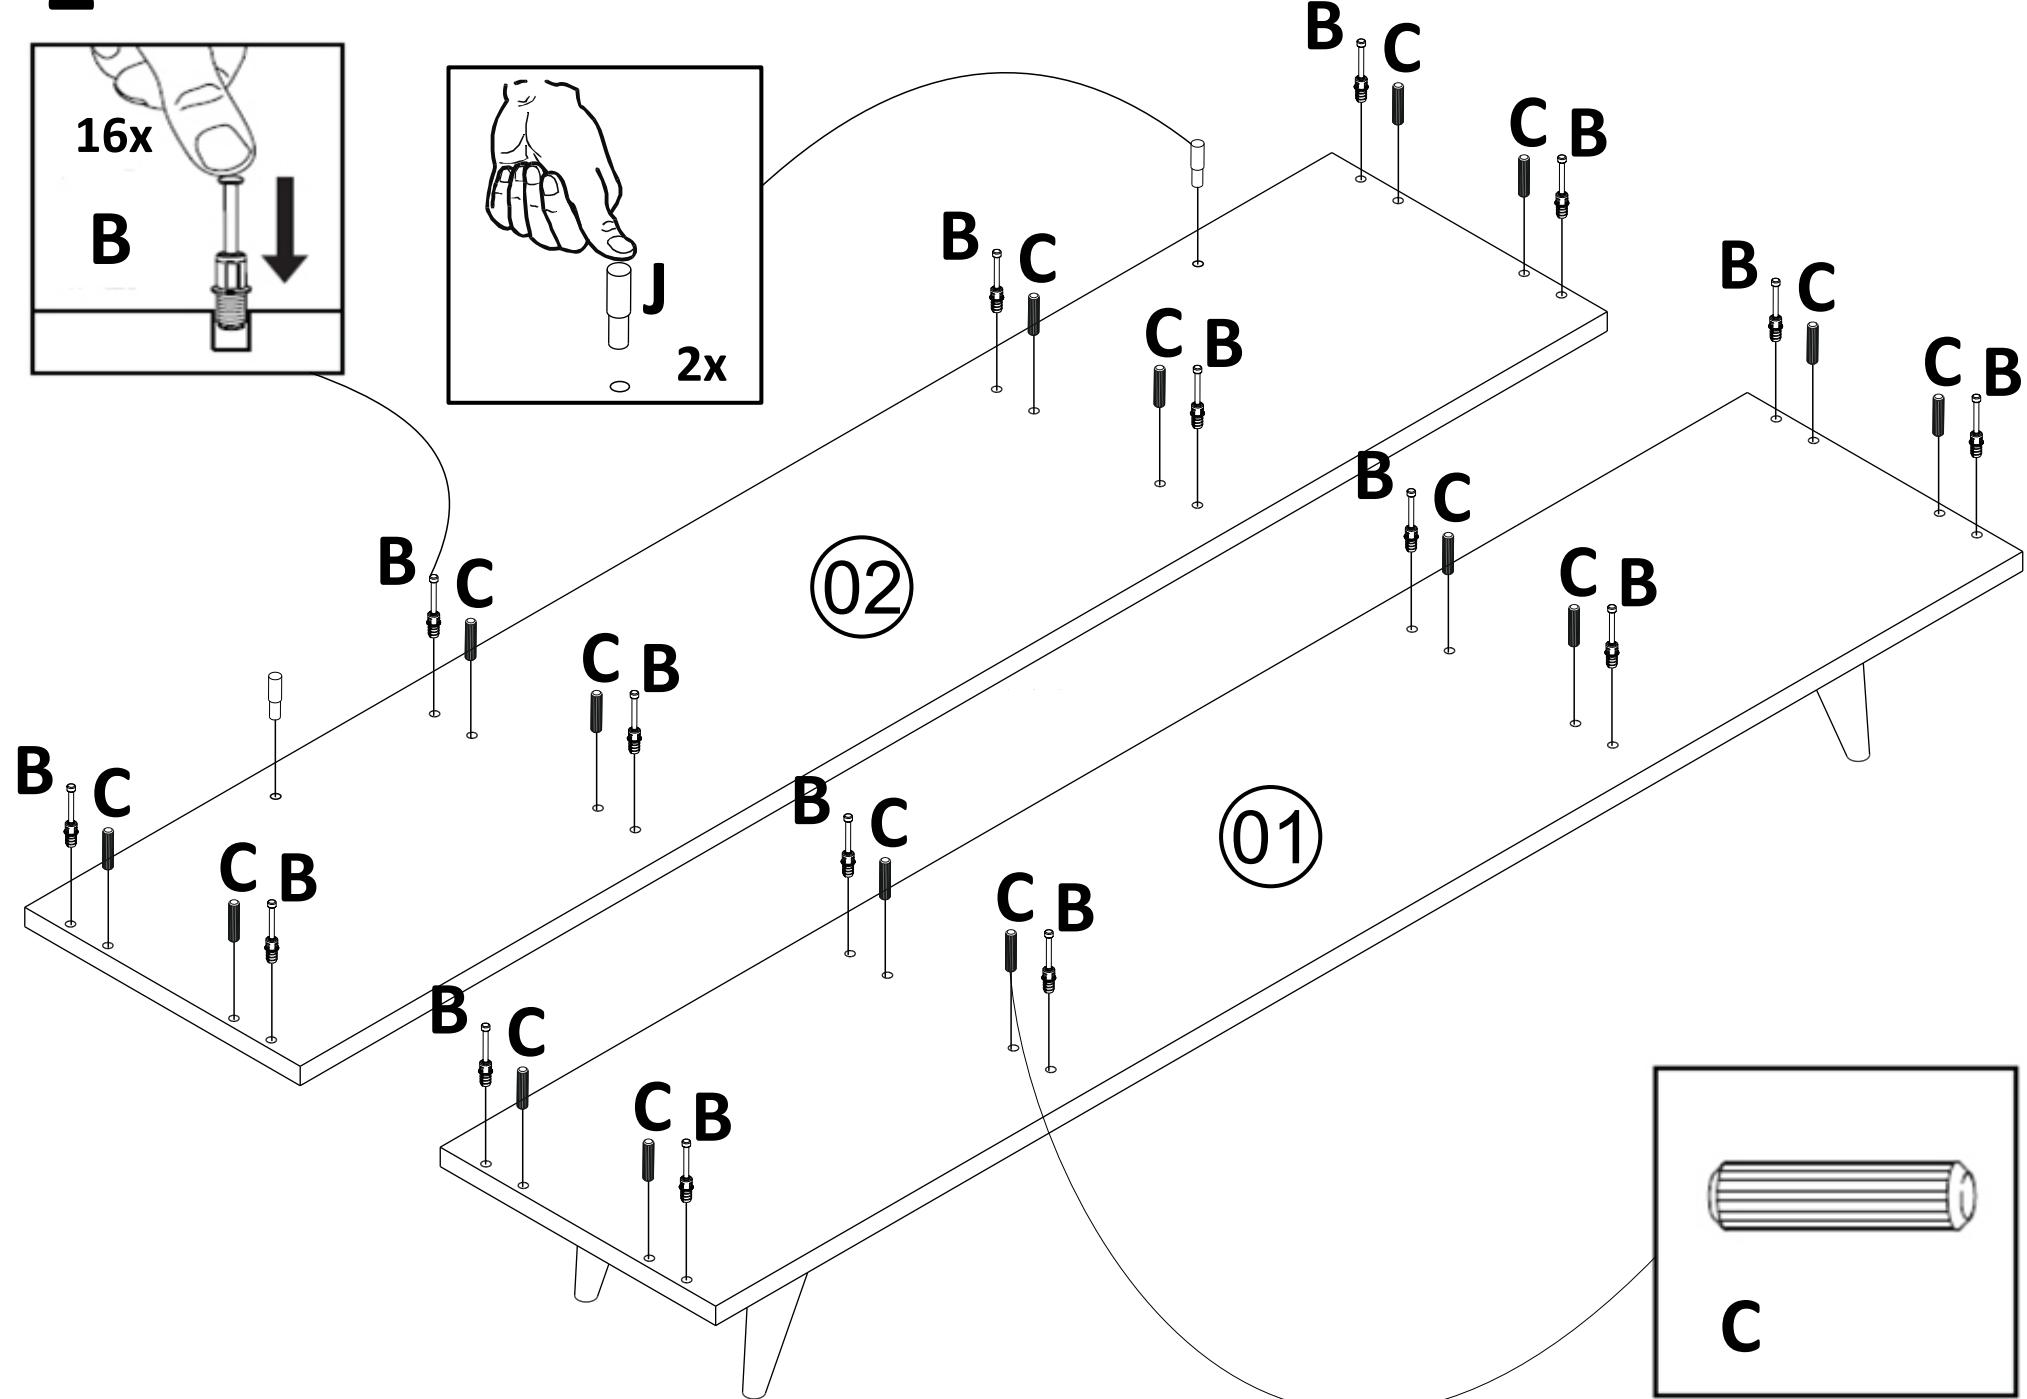
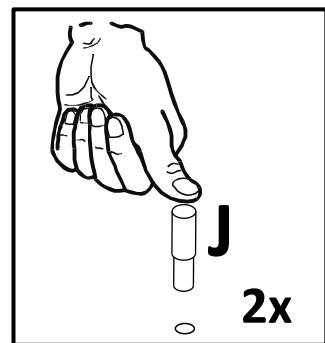
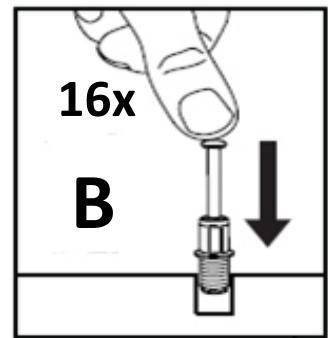


3 Insert the 20 cam locks into the panels 3,4,5 and 6
Install the 4 push bolts and 4 dowels into the panels 4 and 5.

Press firmly into the hole

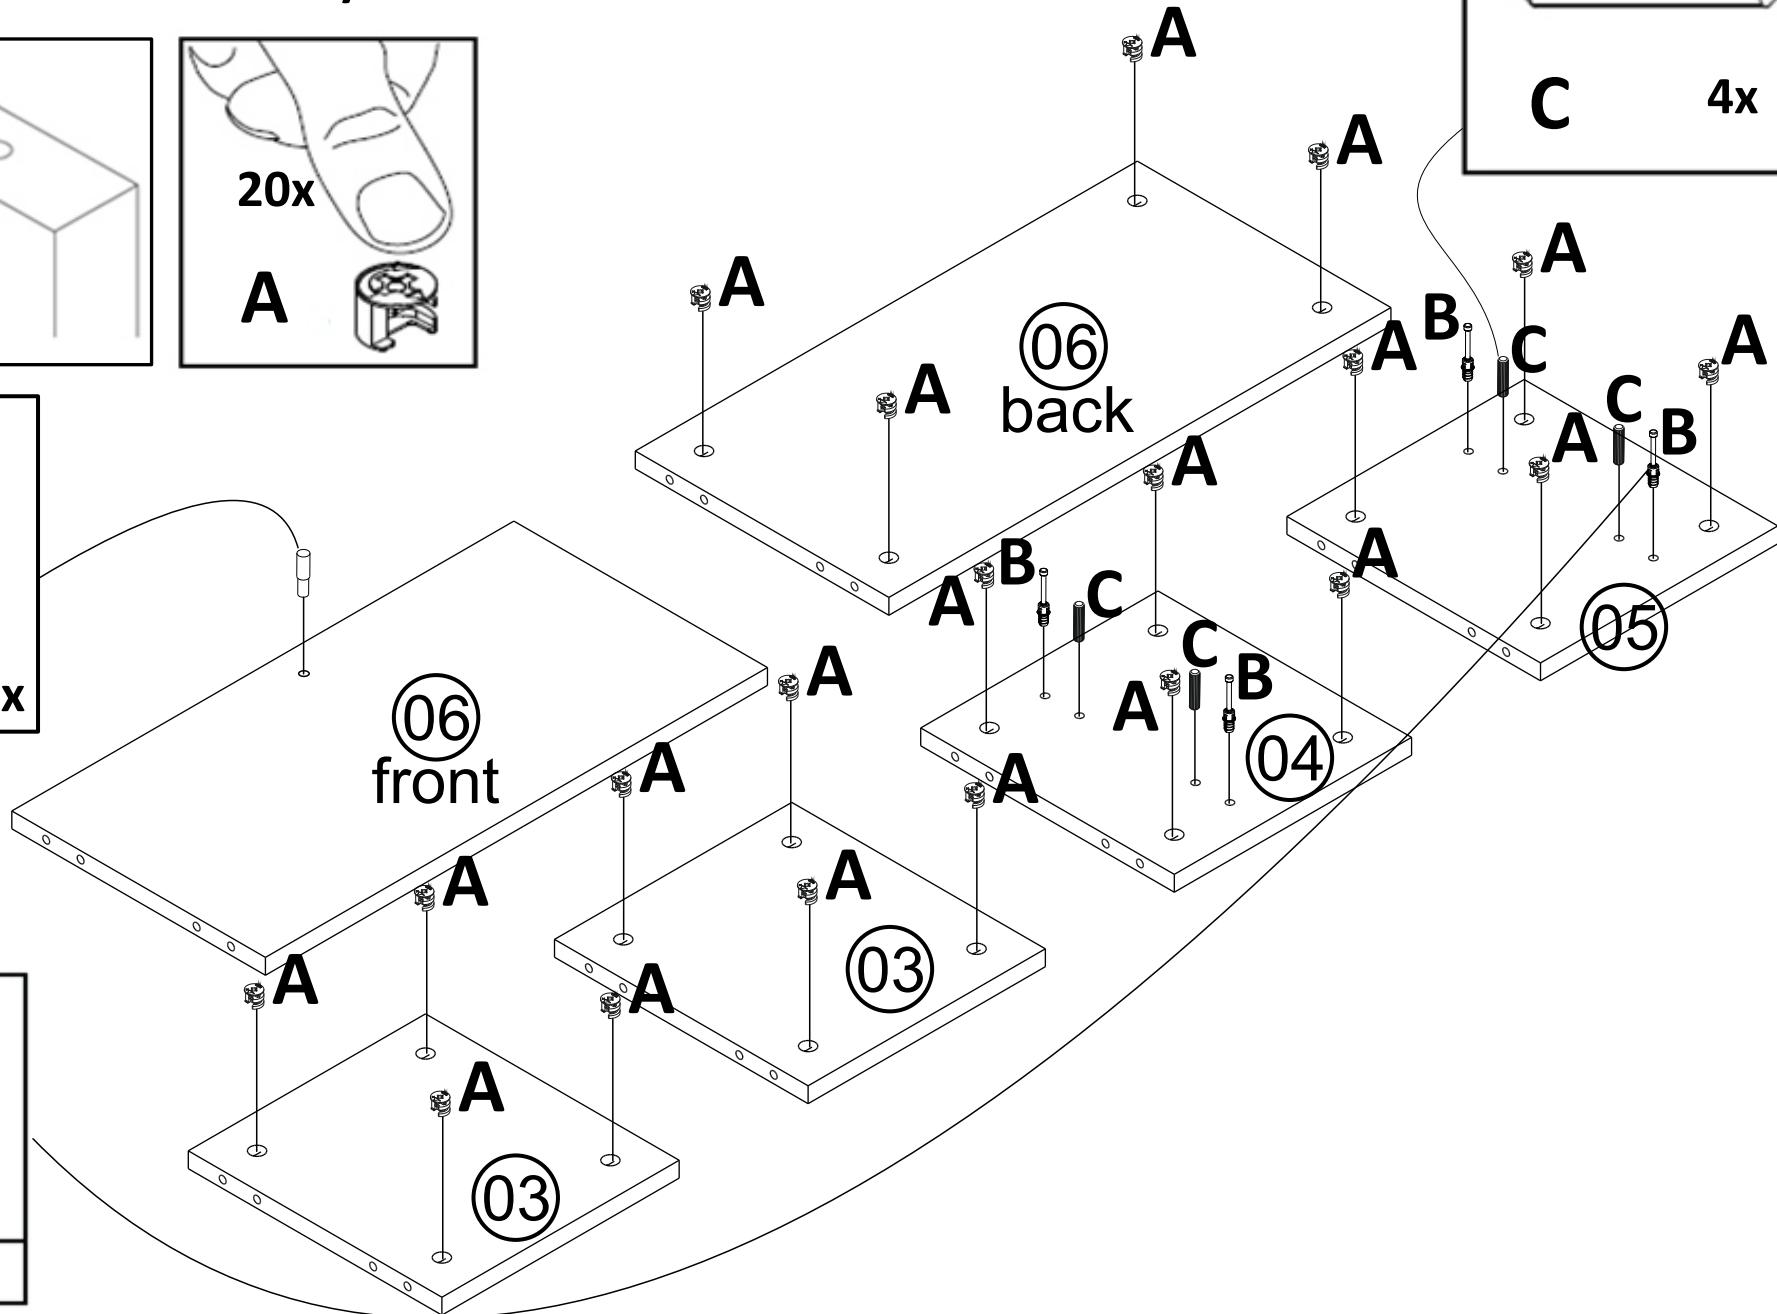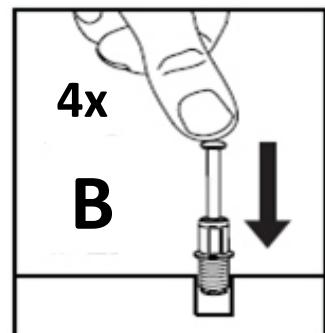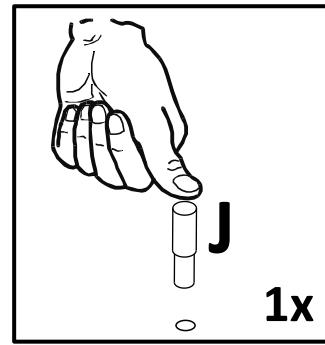
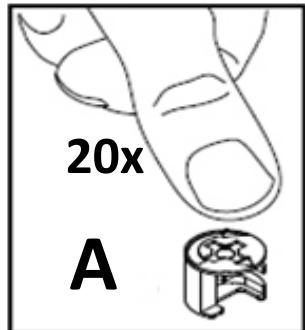
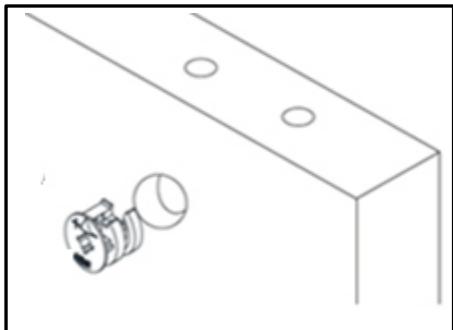


4 Fasten the 6 hinges to a pair of 3 doors 7,8

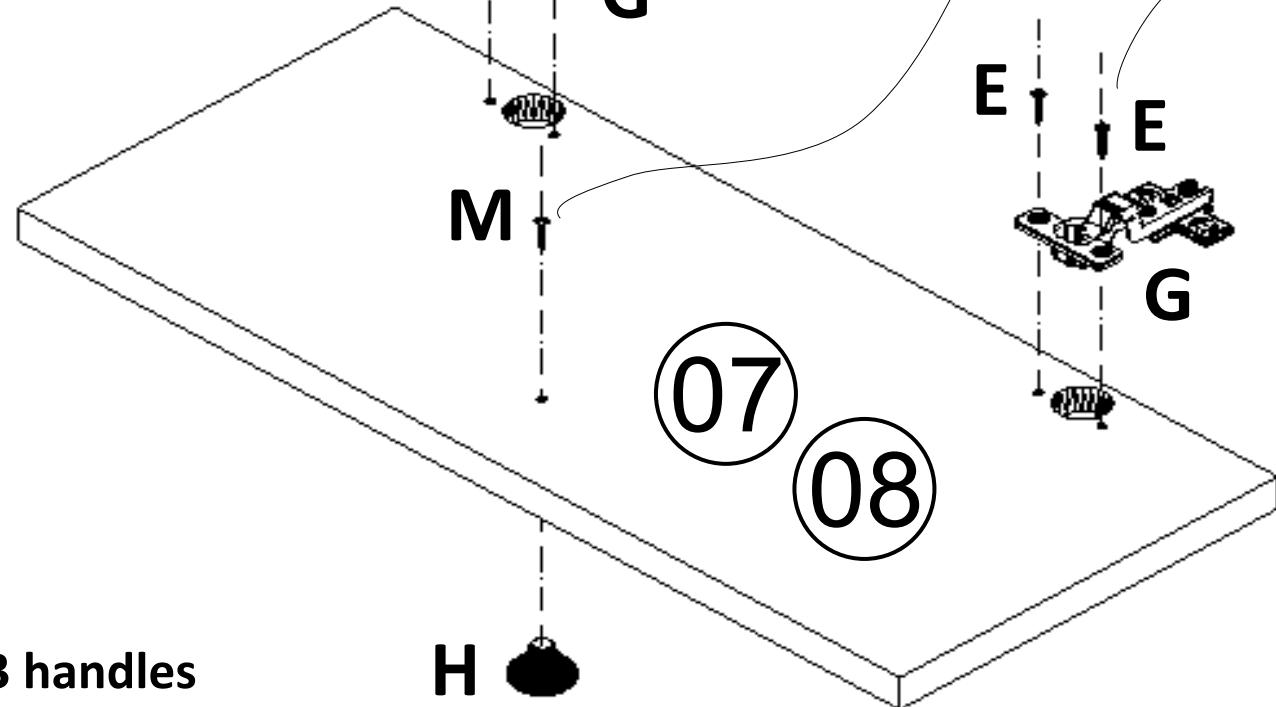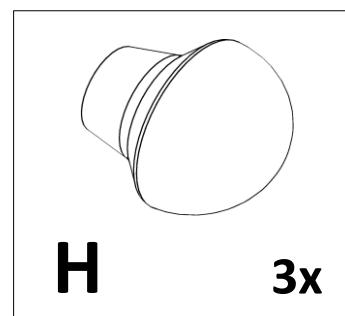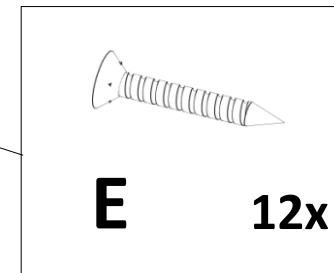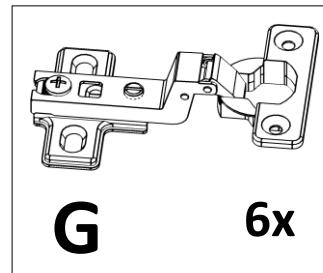
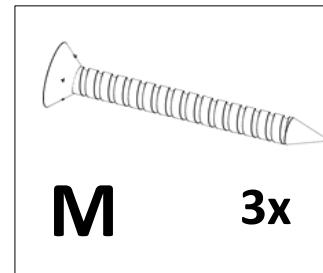
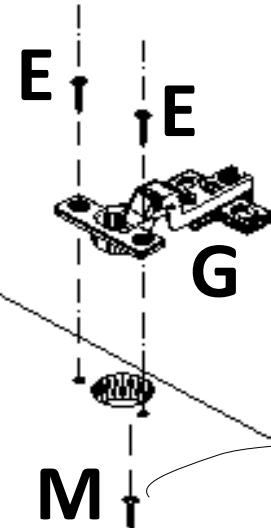
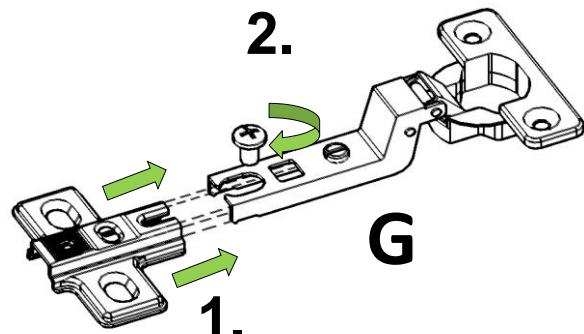


Install the 3 handles
into the 3 doors 7,8

5 Fasten the panel 4 and 5 to the panels 6. Then tighter the 4 cam locks.

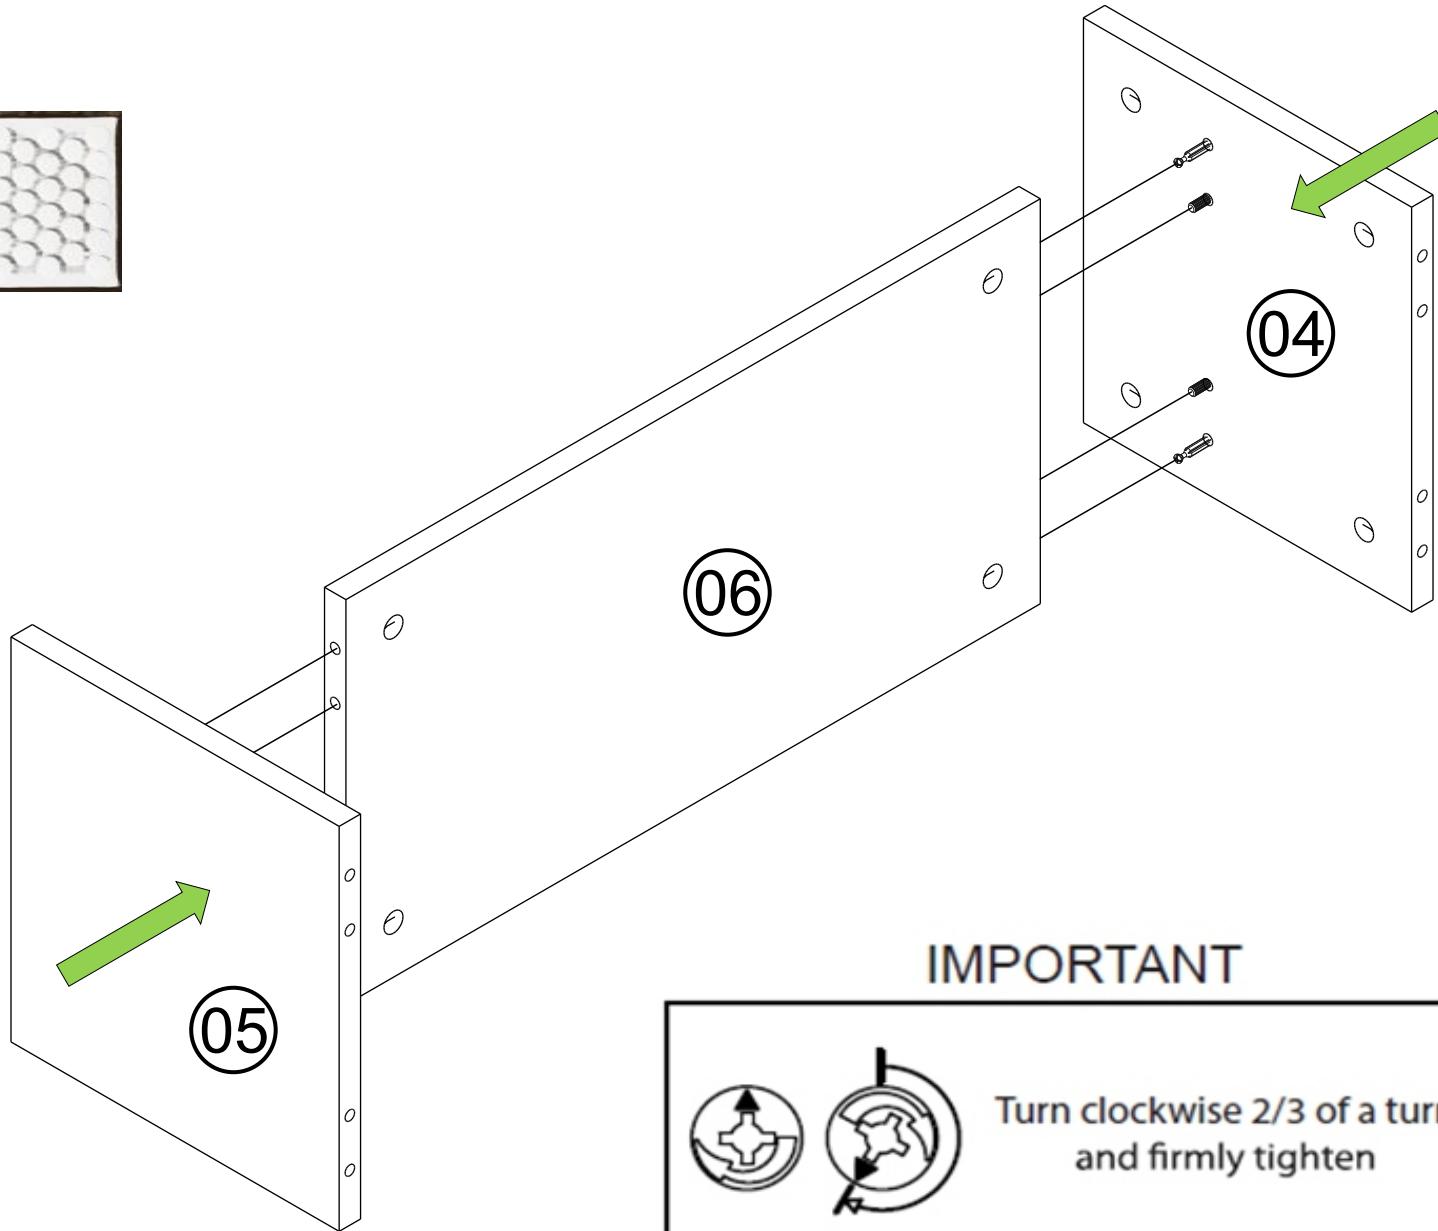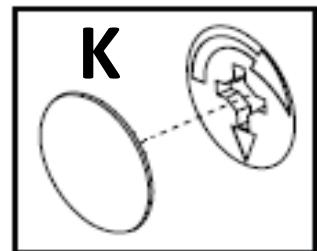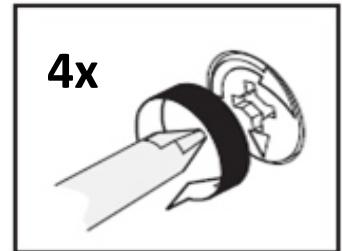

6 Fasten the panel 3,4 and 5 to the panels 1 and 2. Then tighter the 16 cam locks.

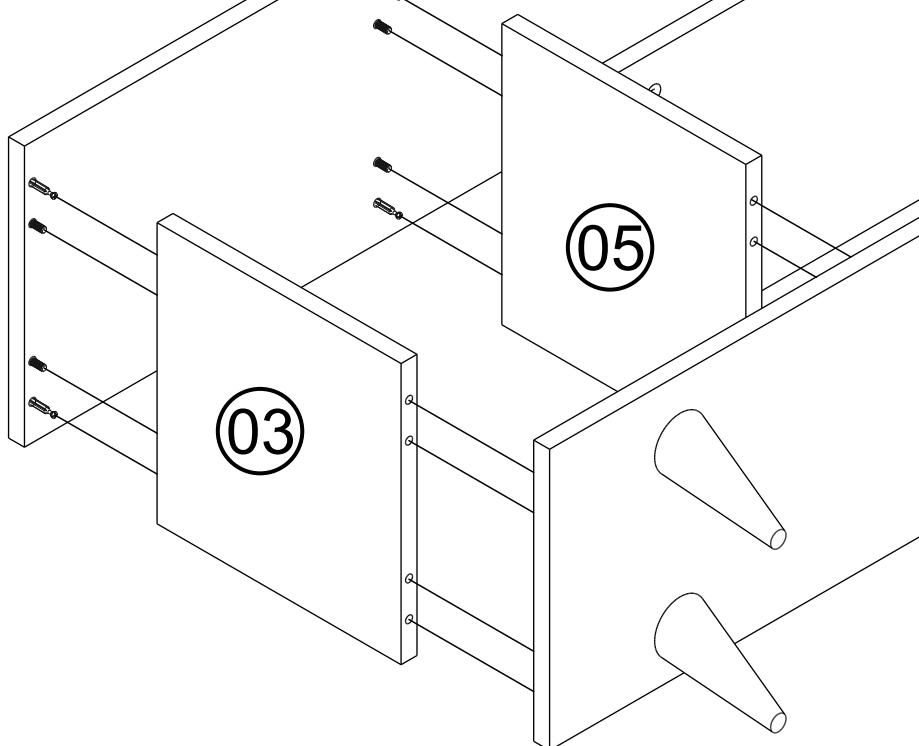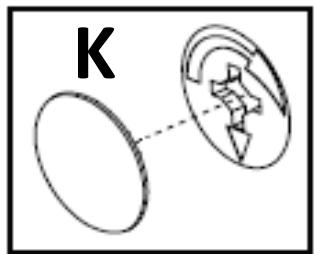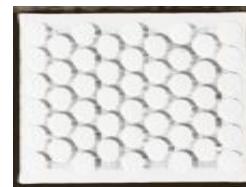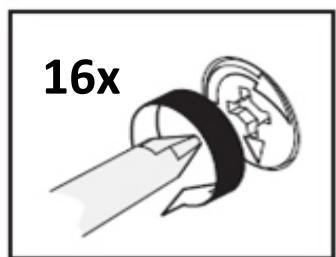

02


04

05

03

01


IMPORTANT

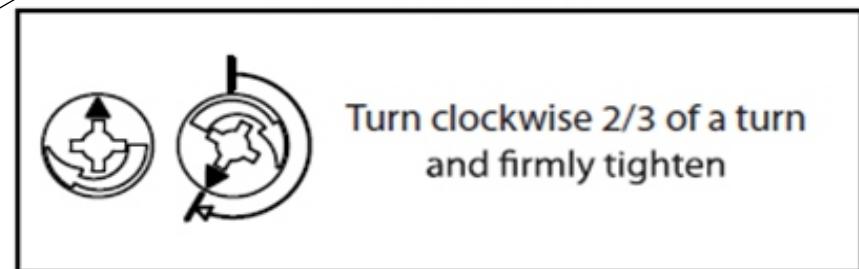

Turn clockwise 2/3 of a turn
and firmly tighten

7

Use the nails to fasten the back panel to the unit.

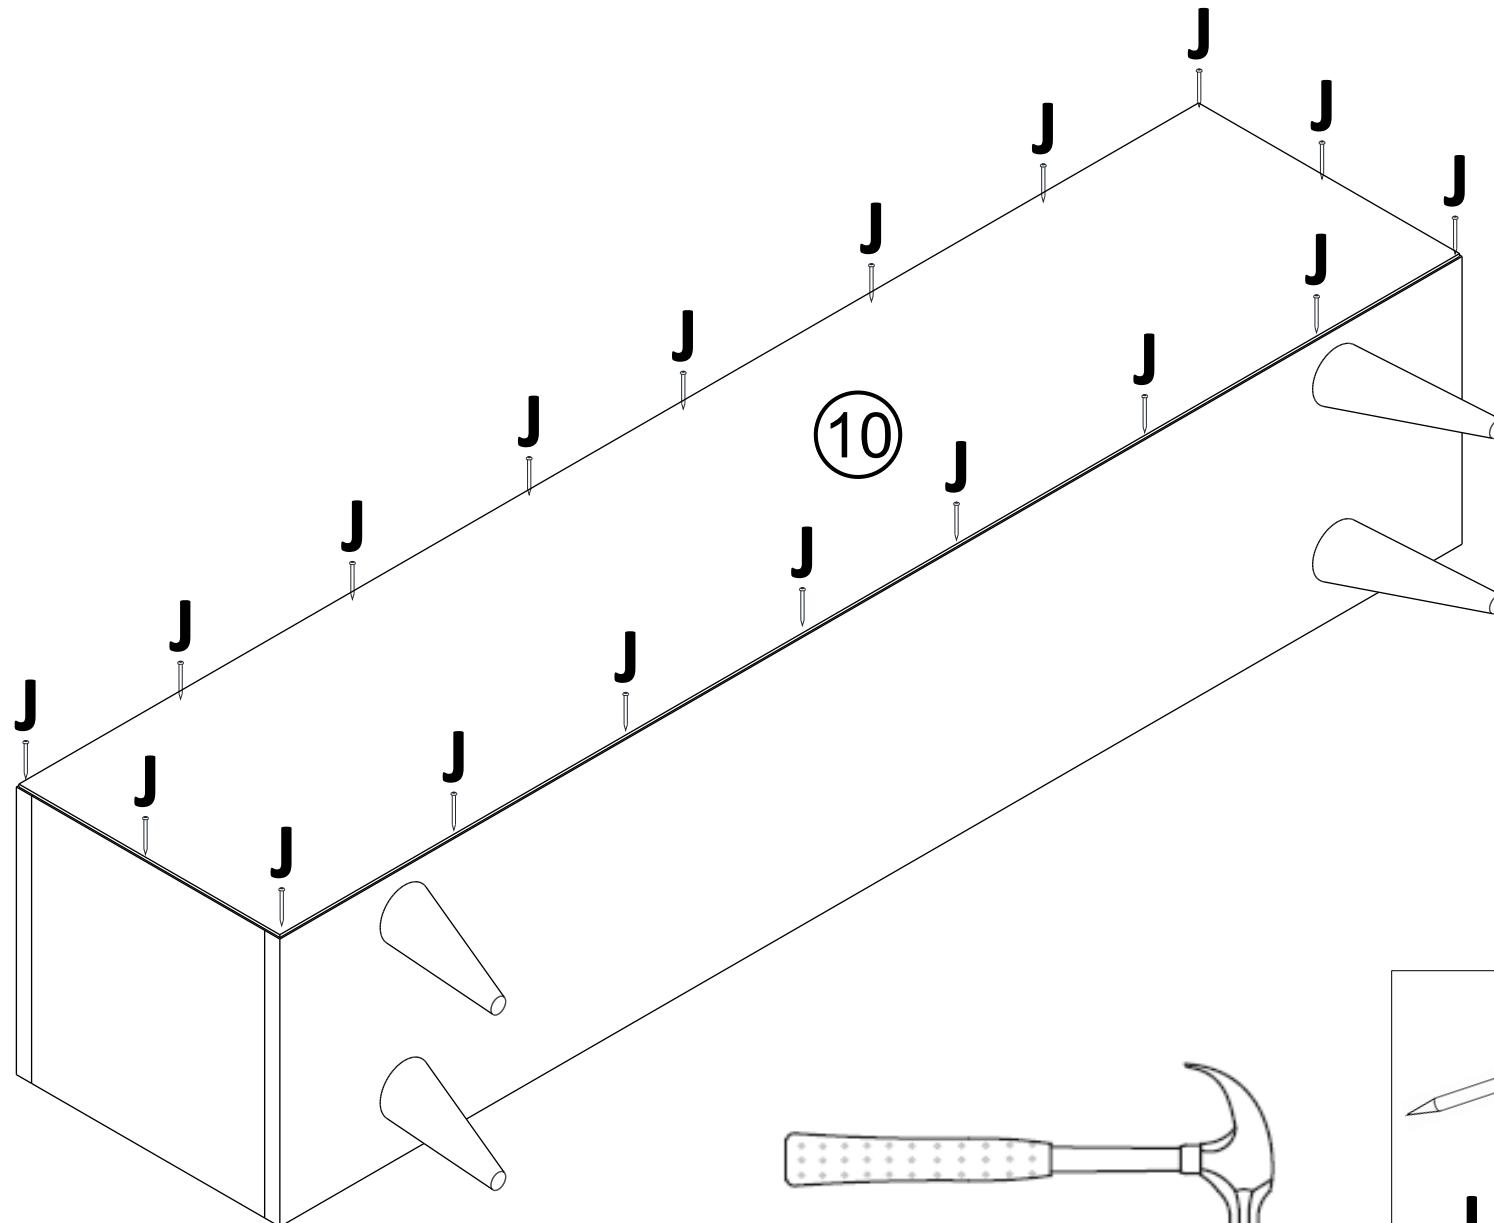




J

18x

10

8


Fasten the doors 7-8, with the hinges, to the panel 1.

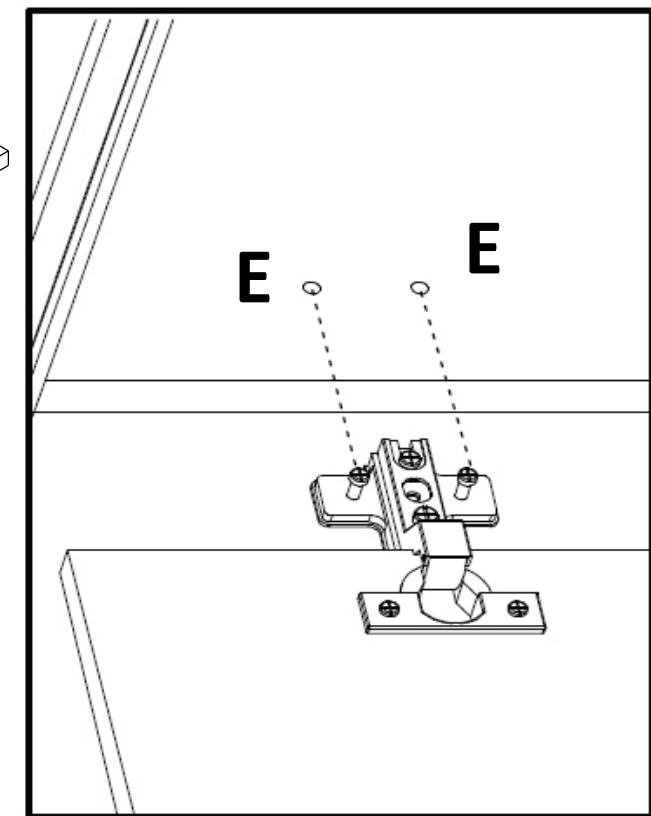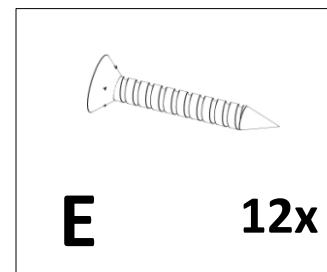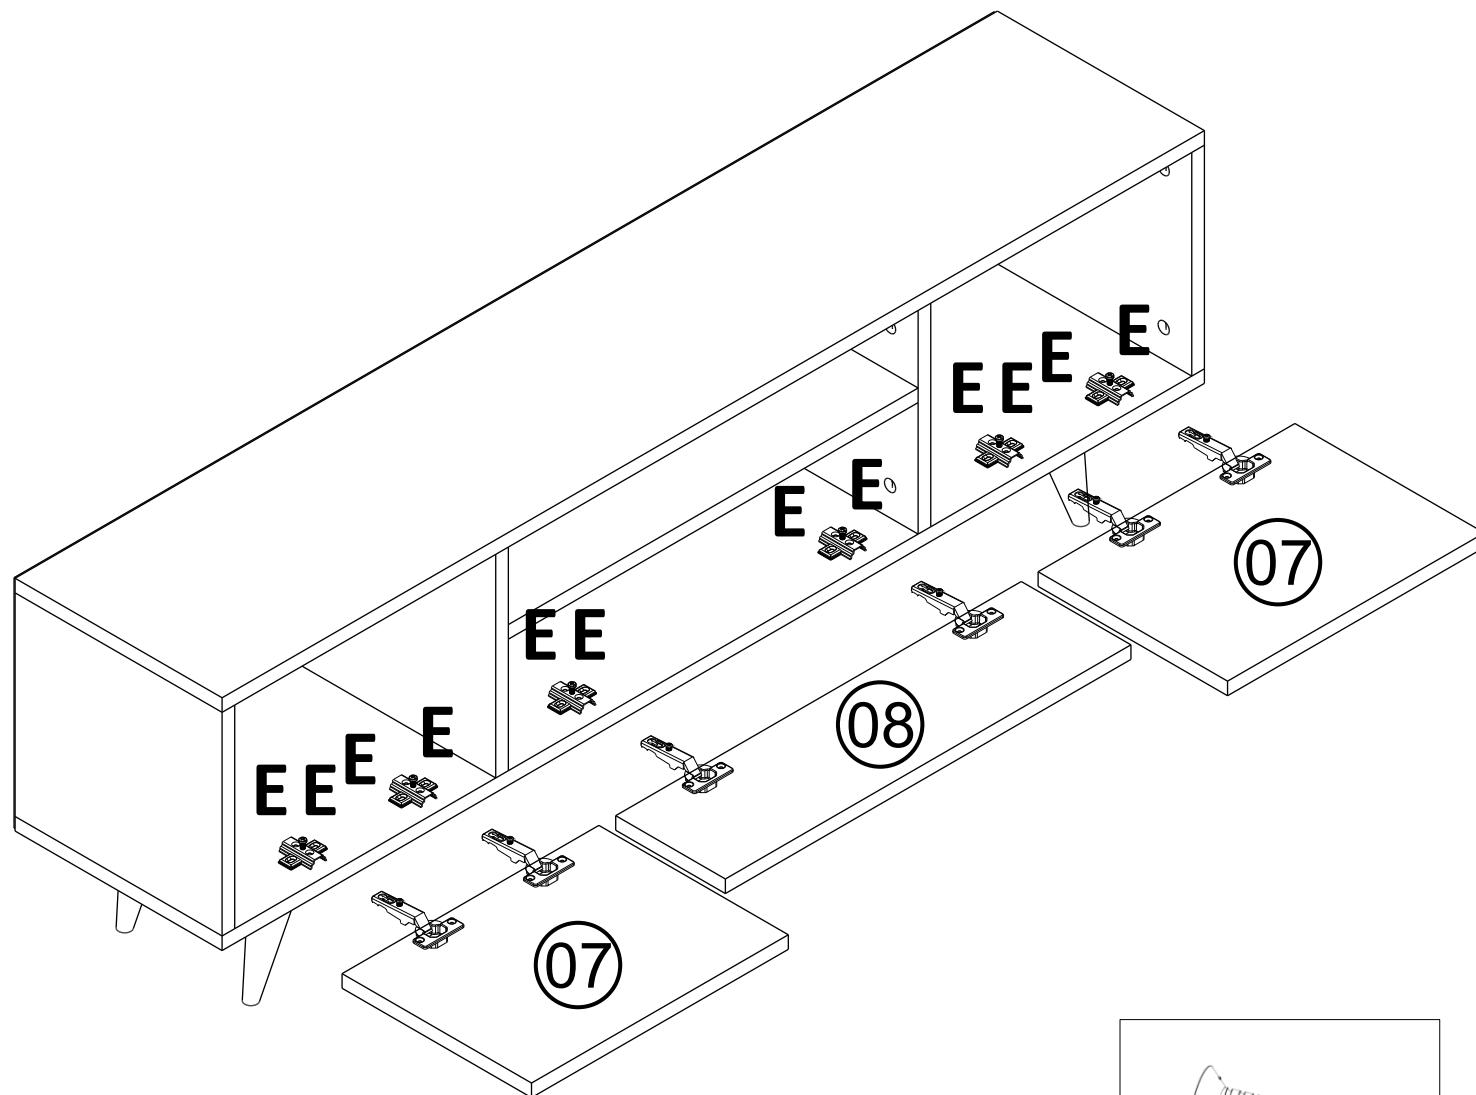

9


Adjustment of hinges.

1

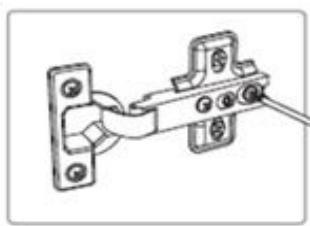


Depth

2

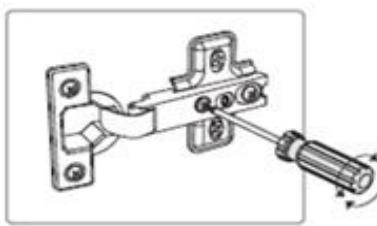

Horizontal
adjustment

3

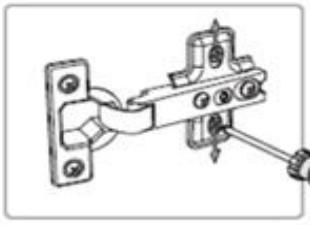

Left - Right

